



International Patent Public No.:WO 2006/007772

China Patent No.: ZL02220153.X,

ZL200420062895.3

US Patent No.: 7549446

India Patent No: 232582

Russia Patent No.: 2349819

South Korea Patent No.: 10-0914137

Mexico Patent No.: 268581

Australia Patent No.: 2005263257

Philippine Patent No.: 1-2006-502553

Taiwan Patent No.: M287896

Multi-functional Flow Control Valve for Water Treatment Systems

53520 (F111B1)

53620 (F111B3)

63520 (F111A1)

63620 (F111A3)

User Manual

Please read this manual in details before using the valve and keep it properly in order to consult in the future.

OWRX.466.583

Before the valve put into use, please fill in the below content so as to help us to refer in the future.

Softener System Configuration

Tank Size: Dia. _____mm, Height _____mm;
 Resin Volume _____L; Brine Tank Capacity _____L;
 Hardness of Raw Water _____mmol/L;
 Pressure of Inlet Water _____MPa;
 Control Valve Model _____; Number _____;
 The Specification of Drain Line Flow Control _____;
 Injector No. _____.
 Water Source: Ground-water Filtered Ground-water
 Tap Water Other _____.

Parameter Set

| Parameter | Unit | Factory Default | Actual Value |
|---|----------------|-----------------|--------------|
| Control Mode A-01/02/03/04 (Meter type) F111B only has A-01/02 | / | A-01 | |
| Water Treatment Capacity (Meter type) | m ³ | 200.0 | |
| Service Days (Time clock type, by days) | D. | 03 | |
| Regeneration Time | / | 02 : 00 | |
| Backwash Time (F111A/B has) | min:sec | 10 : 00 | |
| Brine & Slow Rinse Time (F111A has) | min:sec | 60 : 00 | |
| Brine Refill Time (F111A has) | min:sec | 05 : 00 | |
| Fast Rinse Time (F111A/B has) | min:sec | 10 : 00 | |
| Interval Regeneration Days (Meter type has) | D. | 30 | |
| Output Mode b-01/2 | / | b-01 | |

● If there is no special requirement when product purchase, we choose 4# drain line flow control (With 3 holes of φ6) and 4# injector (7704) for the standard configuration for 63620/63520.

Catalogue

| | |
|--|--|
| Notice | |
| 1.Product Overview | |
| 1.1.Main Application & Applicability..... | |
| 1.2.Product Characteristics | |
| 1.3.Service Condition | |
| 1.4.Product Structure and Technical Parameters | |
| 1.5.Installation | |
| 2.Basic Setting & Usage | |
| 2.1.The Function of PC Board | |
| 2.2.Basic Setting & Usage | |
| 3.Applications | |
| 3.1.Flow Chart | |
| 3.2.The Function and Connection of PC Board | |
| A.Signal Output Connector | |
| B.Interlock | |
| C.Pressure Relief Output..... | |
| D.Remote Handling Connector..... | |
| E.Interlock System | |
| F.Series System | |
| 3.3.System Configuration and Flow Rate Curve..... | |
| 3.4.Parameter Settlement | |
| 3.5.Parameter Enquiry and Setting..... | |
| 3.6.Trial Running | |
| 3.7.Trouble-shooting | |
| 3.8.Assembly & Parts..... | |
| 4.Warranty Card | |

Notice

- To ensure normal operation of the valve, please consult with professional installation or repairing personnel before use it.
- If there are any of pipeline engineering and electric works, there must be finished by professional at the time of installation.
- Do not use the control valve with the water that is unsafe or unknown quality.
- Depending on the changing of working environment and water requirement, each parameter of softener should be adjusted accordingly.
- When the water treatment capacity is too low, please check the resin. If the reason is shortage of resin, please add; if the resin is turn to reddish brown or broken, please replace.
- Test water periodically to verify that system is performing satisfactorily.
- Ensure that there is solid salt all the time in the brine tank in the course of using, when this valve is used for softening. The brine tank should be added the clean water softening salts only, at least 99.5% pure, forbidding use the small salt.
- Do not put the valve near the hot resource, high humidity, corrosive, intense magnetic field or intense librations environment. And do not leave it outside.
- Forbidden to carry the injector body. Avoid to use injector body as support to carry the system.
- Forbidden to use the brine tube or other connectors as support to carry the system.
- Please use this product under the water temperature between 5~50 °C, water pressure 0.2~0.6 MPa. Failure to use this product under such conditions voids the warranty.
- If the water pressure exceeds 0.6 Mpa, a pressure reducing valve must be installed before the water inlet. While, if the water pressure under 0.2MPa, a booster pump must be installed before the water inlet.
- It is suggested to install PPR pipe, corrugated pipe or UPVC pipe, instead of TTLSG pipe. Keep the pipeline straight.

- Do not let children touch or play, because carelessness operating may cause the procedure changed.
- When the attached cables of this product and transformer are broken, they must be changed to the one that is from our factory.

1.Product Overview

1.1.Main Application & Applicability

Used for softening, demineralization or filtration water treatment systems

53520/53620 (Filtration)

Suitable for swimming pool filter system

Filtration system

Activated carbon filter or sand filter of RO pretreatment system.

63520/63620 (Down-flow regeneration)

Suitable for ion exchange equipment, the raw water hardness $\leq 6.5\text{mmol/L}$.

Boiler softening water system

RO pretreatment softening system, etc.

1.2.Product Characteristics

➤ Simple structure and reliable sealing

It adopts hermetic head faces with high degree pottery and corrosion resistance for opening and closing. It combines with Service, Backwash, Brine & Slow Rinse, Brine Refill and Fast Rinse.

➤ No water passes the valve during regeneration in single tank type

➤ Brine refill controlled by electronic ball valve

During service, electronic ball valve will control to start the brine refill. In order to short the regeneration cycle time.

➤ DF softener system can be changed to filtration system

Block the brine line connector and remove the drain connector of 63520 to change the valve to filter valve 53520.

Block the brine line connector and remove the drain connector of 63620 to change the valve to filter valve 53620.

➤ Manual function

Realize regeneration immediately by pushing “” at any time.

➤ Long outage indicator

If outage overrides 3 days, the time of day indicator “12:12” will flash

to remind people to reset new time of day. The other set parameters do not need to reset. The process will continue to work after power on.

➤ LED dynamic screen display

The stripes on dynamic screen flash, they indicate the control valve is in service, otherwise, it is in regeneration cycle.

➤ Buttons lock

No operations to buttons on the controller within 1 minute, button lock indicator light on which represent buttons are locked. Before operation, press and hold the “▲” and “▼” buttons for 5 seconds to unlock. This function can avoid incorrect operation.

➤ It can choose all models by program selection

When all symbols light on, press and hold ▼ and ≡ buttons more than 2 seconds to enter the menu of valve model selection. Press “▲” and “▼” buttons to select the requested model, then press □ button to save the selection. Reconnect the power, the model will be showed on display board.


➤ Interlock function

It has a function of interlock to realize only one valve in regeneration but the other valves are in service while several valves parallel in system. In multi-steps treatment systems such as RO pre-treatment, when several valves are in series, there is only one valve in regeneration or washing to ensure pass water all the times.(Application refer to Figure 3-9)


➤ Signal output (Only for 63620/63520)

There is a signal output connector on main control board. It is for controlling external wiring (Refer to Figure3-1 to Figure 3-8).

There are two kinds of output modes: b-01 Mode: Turn on start of regeneration and shut off end of regeneration; b-02 Mode: Signal available only intervals of each status.

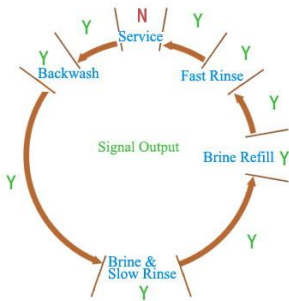

b-01

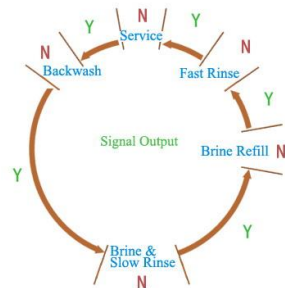

b-02

➤ Remote handling input

This connector can receive external signal, used together with PLC, and computer etc. to control the valve. (Application refers to Figure3-11)

➤ Pressure relief output

The valve will cut off feeding water to drain line when it switches in regeneration cycles (Same as signal output b-02). Thus in some water treatment system, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising too fast to damage the valve. Pressure Relief Output can be used to avoid this problem. (Application refers to Figure3-10)

➤ All parameters can be modified

According to the water quality and usage, the parameters in the process can be adjusted.

➤ Four kinds of meter type can be selected (Suit for 63620)

| Mode | Name | Instruction |
|------|-----------------|---|
| A-01 | Meter Delayed | Regenerate on the day although the available volume of treated water drops to zero (0). Regeneration or fast rinse starts at the regeneration time. |
| A-02 | Meter Immediate | Regenerate or fast rinse immediately when the available volume of treated water drops to zero(0). |

MODEL 53520/53620/63520/63620

| | | |
|------|-----------------------------|---|
| A-03 | Intelligent Meter Delayed | Meter Delayed Regeneration type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity. Regeneration mode is the same as A-01. |
| A-04 | Intelligent Meter Immediate | Meter Immediately Regeneration Type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity. Regeneration mode is the same as A-02. |

A-01, A-02 are suitable for 53620.

➤ Maximum interval regeneration days (Suit for 53620/63620)

Under the situation of service reaching the setting days and the volume not yet, it could enter into regeneration process or fast rinse forcibly when current time is the same as regeneration time.

1.3.Service Condition

Runxin Valve should be used under the below conditions:

| Items | | Requirement |
|---------------------|-------------------------|--|
| Working conditions | Water pressure | 0.2MPa~0.6MPa |
| | Water temperature | 5°C~50°C |
| Working environment | Environment temperature | 5°C~50°C |
| | Relative humidity | ≤95% (25°C) |
| | Electrical facility | AC100~240V/50~60Hz |
| Inlet water quality | Water turbidity | Softener(63520/63620)<5FTU; Filter(53520/53620)<20FTU |
| | Water hardness | First Grade Na ⁺ <6.5mmol/L; Second Grade Na ⁺ <10mmol/L |
| | Free chlorine | <0.1mg/L |

MODEL 53520/53620/63520/63620


| | | |
|--|--------------------|--------------------------|
| | Iron ²⁺ | <0.3mg/L |
| | CODMn | <2mg/L (O ₂) |

In the above table, First Grade Na⁺ represents First Grade Na⁺ Exchanger. Second Grade Na⁺ represents Second Grade Na⁺ Exchanger.

- When the water turbidity exceeds the conditions, a filter should be installed on the inlet of control valve.
- When the water hardness exceeds the conditions, the outlet water hardness will hardly reach the requirement of boiler feed water(0.03 mmol/L). It is suggested to adopt second grade softener.

1.4.Product Structure and Technical Parameters

A.Product dimension (The appearance is just for reference. It is subjected to the real product.)

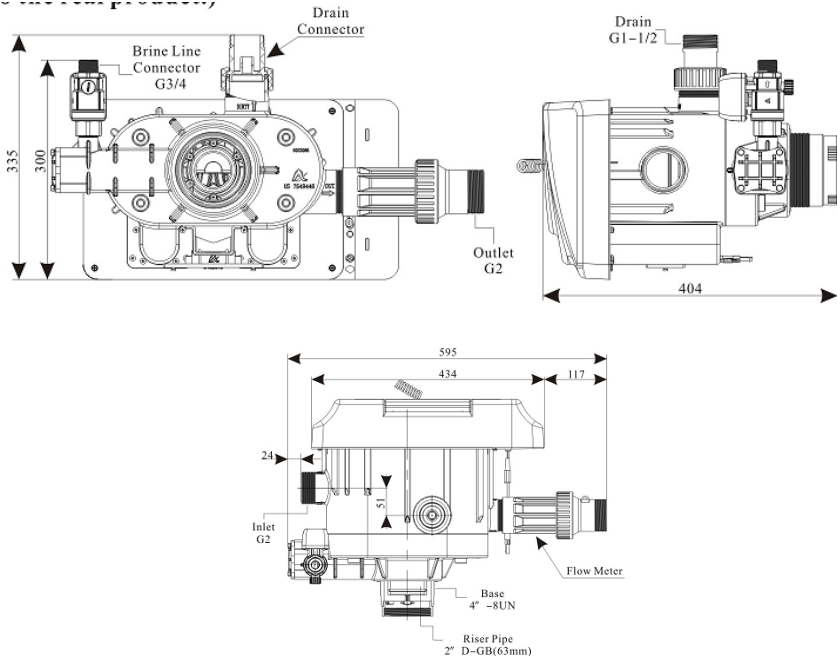

Structure of 63620

Remark:

Remove the flow meter from 63620, it will be 63520.

If block the brine line connector of 63620 and remove the ball valve and drain connector, it will be 53620.

If block the brine line connector of 63520 and remove the ball valve and drain connector, it will be 53520.

B.Technical parameter

Transformer Output: DC24V/1.5A

| Model | Connector Size | | | | | Flow Rate m ³ /h @0.2MPa | Remark |
|-------|------------------|--------|-------------------------|--------|------------------------------------|---|---------------------------------|
| | Inlet/ Outlet | Drain | Brine Line Connector | Base | Riser Pipe | | |
| 53620 | 2" M | 2" M | / | 4"-8UN | 2"D-GB (Outer diameter 63mm) | See the Flow Rate Characteristic | Filter, meter type |
| 53520 | | | | | | | Filter, time clock type |
| 63620 | 2" M | 1.5" M | 3/4" M | 4"-8UN | 2"D-GB (Outer diameter 63mm) | 21.1 | DF softener, meter type |
| 63520 | | | | | | | DF softener, time clock type |

Remark: M—Male F—Female

1.5.Installation

A.Installation notice

Before installation, read all those instructions completely. Then obtain all materials and tools needed for installation.

The installation of product, pipes and circuits, should be accomplished by professional to ensure the product can operate normally.

Perform installation according to the relative pipeline regulations and the specification of Water Inlet, Water Outlet, Drain Outlet, and Brine Line Connector.

B.Device location

- ① The filter or softener should be located close to drain.
- ② Ensure the unit is installed in enough space for operating and maintenance.
- ③ Brine tank need to be close to softener.
- ④ The unit should be kept away the heater, and not be exposed outdoor. Sunshine or rain will cause the system damage.
- ⑤ Please avoid to install the system in one acid/alkaline, magnetic or strong vibration circumstance, because above factors will cause the system disorder.
- ⑥ Do not install the filter or softener, drain pipeline in circumstance which temperature may drop below 5°C, or above 45°C
- ⑦ One place is recommended to install the system which cause the minimum loss in case of water leaking.

C.Pipeline installation (Take 63620 as a sample)

① Install control valve

- a. As the Figure 1-1 shows, select the riser pipe with 63mm OD, glue the riser pipe to the bottom strainer and put it into the mineral tank, cut off the exceeding tube out of tank top opening. Plug the riser tube in case of mineral entering.
- b. Fill the mineral to the tank, and the height is accordance with the design code.
- c. Install the top distributor to the valve.
- d. Insert the riser tube into control valve and screw tight control valve.

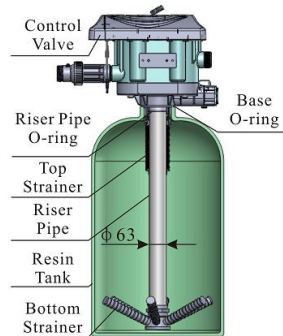


Figure 1-1

Note:

- The length of riser tube should be neither higher 2 mm nor lower 5 mm tank top opening height, and its top end should be rounded to avoid damage of O-ring inside the valve.
- Avoid floccules substance together with resin to fill in the mineral tank.

- **Avoid O-ring inside control valve falling out while rotating it on the tank.**

② Install flow meter

As Figure1-2 shows, put the sealing ring into nut of flow meter, screw in water outlet; insert the sensor into flow meter.

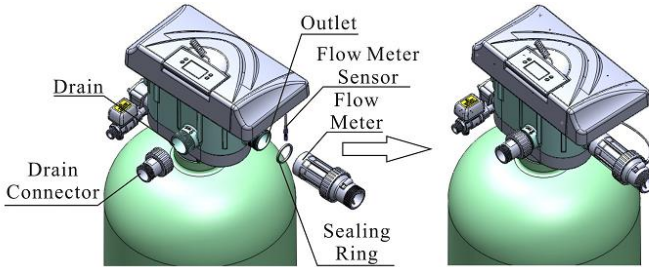


Figure 1-2

③ Pipeline connection

- As Figure1-3 shows, install a pressure gauge in water inlet.
- Install valves A.B.C.D in inlet, outlet and pipeline as showed in Figure 1-3. Valve D is a sampling valve.
- Inlet pipeline should be in parallel with outlet pipeline. Support inlet and outlet pipeline with fixed holder.

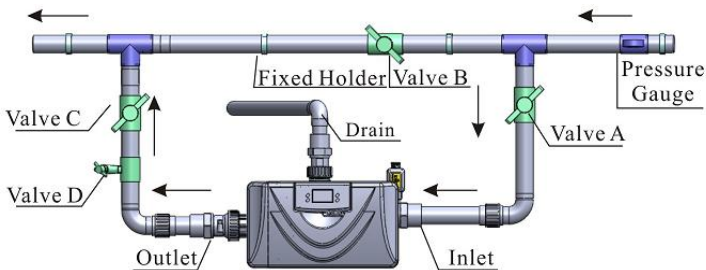


Figure 1-3

Note:

- If making a soldered copper installation, do all sweat soldering before connecting pipes to the valve. Torch heat will damage plastic parts.
- When turning threaded pipe fittings onto plastic fitting, use care and do not cross thread or break valve.
- If the valve belongs to time clock type (F111A1, F111B1), there are

no step ②

④ Install drain pipeline (If no special requirement, the standard DLFC is No.7704)

a. Based on product configuration, for 63620/63520, if tank diameter is 1000 mm, install step d. If the tank size is 900 mm or 1200mm, you need to ask supplier for another injector & DLFC. Install it as below steps.

b. Change 7704 to the corresponding injector for the tank which is 900 mm or 1200mm.

c. Change DLFC to the corresponding DLFC for the tank which is 900 mm or 1200mm.

d. Insert drain line flow control into drain hose connector, then screw it into drain outlet, and lock it.



Figure 1-4

e. Glue the drain outlet with UPVC (DN40). Put drain outlet pipe to sewer as showed in the Figure 1-4.

f. For filter valve 53620/53520, there is no DLFC, install UPVC (DN50) according to step e.

Note:

- **Control valve should be higher than drain outlet, and be better not far from the drain hose.**
- **Be sure not connect drain with sewer, and leave a certain space between them, avoid wastewater be absorbing to the water treatment equipment.**

⑤ Connect brine tube

a. As Figure1-5 shows, use UPVC (DN20) to connect brine valve with brine line connector

Note:

- **Keep brine line short and smooth. Elbows no more than four to**

avoid bad brine.

- Brine valve must be installed.


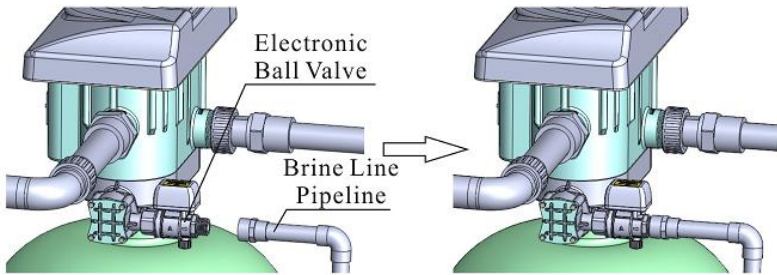


Figure 1-5

2. Basic Setting & Usage

2.1. The Function of PC Board

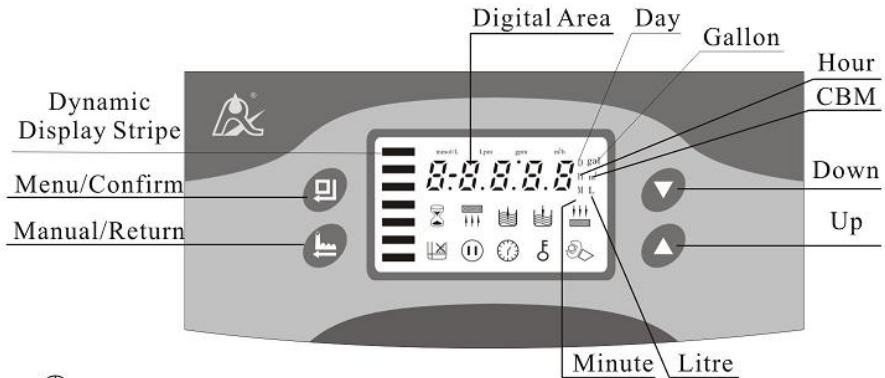

A. “⌚” Time of day indicator

“⌚” Light on, display the time of day

B. ⌚ Button lock indicator

● “⌚” Light on, indicate the buttons are locked. At this moment, press any single button will not work (No operation in one minute, ⌚ will light on and lock the buttons.)

● Solution: Press and hold both ▲ and ▼ for 5 seconds until the ⌚ light off.

C. ⌚ Program mode indicator

● ⌚ Light on, enter program display mode. Use ▲ or ▼ to view all values.

● ⌚ Flash, enter program set mode. Press ▲ or ▼ to adjust values.

D. ⌚ Manu/Confirm button




● Press ⌚, ⌚ light on, enter program display mode and use ▲ or ▼ to view all values.



● In program display mode, press ⌚, ⌚ flash, enter program set mode, press ▲ or ▼ and adjust values.


● Press ⌚ after all program are set, and then the voice “Di” means all

setting are success and return program display mode.

E.  Manual/Return button

- Press  in any status, it can proceed to next step.(Example: Press  in Service status, it will start regeneration cycles instantly; Press  while it is in Backwash status, it will end backwash and go to Brine & Slow Rinse at once.)


- Press  in program display mode, and it will return in Service; Press  in program set mode, and it will return program display mode.

- Press  while adjusting the value, then it will return program display mode directly without saving value.

F. Down  and Up 


- In program display mode, press  or  to view all values.

- In program set mode, press  or  to adjust values






 
- Press and hold both  and  for 5 seconds to unlock the buttons.

2.2. Basic Setting & Usage

A. Parameter specification

| Function | Indicator | Factory Default | Parameter Set Range | Instruction |
|--------------|---|-----------------|---------------------|--|
| Time of Day |  | Random | 00:00~23:59 | Set the time of day when use; “: ” flash. |
| Control Mode | A-01 | A-01 | A-01 | Regenerate on the day although the available volume of treated water drops to zero (0). Regeneration starts at the regeneration time. |
| | | | A-02 | Regenerate immediately when the available volume of treated water drops to zero(0). |
| | | | A-03 | Meter Delayed Regeneration type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity. Regeneration mode same as |

MODEL 53520/53620/63520/63620

| | | | | |
|------------------------------------|---|--------|-------------|--|
| | | | | A-01. |
| | | | A-04 | Meter Immediately Regeneration Type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity. Regeneration mode same as A-02. |
| Service Days |  | 1-03D. | 0~99 Days | Only for Time Clock Type, regeneration by days |
| Regeneration Time | 02:00 | 02:00 | 00:00~23:59 | Regeneration time; “:” light on |
| Resin Volume | 500 | 500 | 20—2000 | Resin volume in brine tank (L) |
| Feed Water Hardness | Yd1.2 | 1.2 | 0.1—9.9 | Feed water hardness (mmol/L) |
| Exchange Factor | AL.65 | 0.65 | 0.30—0.99 | Relate to the raw water hardness. When hardness is higher, the factor is smaller. |
| Water Treatment Capacity |  | 200 | 0~9999.9 | Water treatment capacity in one circle (m ³) |
| Backwash Time |  | 10: 00 | 0~99: 59 | Backwash time (Minute:Second) |
| Brine & Slow Rinse Time |  | 60: 00 | 0~99: 59 | Brine & Slow rinse time (Minute:Second) |
| Fast Rinse Time |  | 10: 00 | 0~99: 59 | Fast rinse time (Minute:Second) |
| Brine Refill Time |  | 05: 00 | 0~99: 59 | Brine refill time (Minute:Second) |
| Maximum Interval Regeneration Days | H-30 | 30 | 0~40 | Regenerate on the day even through the available volume of treated water do not drop to zero (0). |
| Output Control Mode | b-01 | 01 | 01 or 02 | Mode 01: Signal turn on start of regeneration and shut off end of regeneration. (Connection refer to the Figure on P3) |

| | | | | |
|--|--|--|--|--|
| | | | | Mode 02: Signal available only intervals of regeneration cycles and in service. (Connection refer to the Figure on P3) |
|--|--|--|--|--|

B. Process Display (Take 63620 A-01 as a sample)



Figure A

 


Figure B



Figure C

 


Figure D



Figure E



Figure F



Figure G



Figure H


Illustration:

- In Service status, the figure shows A/B/C/D; In Backwash status, it shows figure E/C; In Brine & Slow Rinse status, it shows F/C; In Fast Rinse status, it shows figure G/C; In Brine Refill status, it shows figure H/C. In each status, every figure shows 15 seconds.
- Above displays are taking the Meter Type for example. For the Time Clock Type, it shows the rest days, such as 1-03D.
- The display screen will only show “-00-” when the electrical motor is running.
- The time of day figure “⌚” flash continuously, such as “12: 12” flash, indicates long outage of power. It reminds to reset the time of day.
- The display will show the error code, such as “-E11-” when the system is in error.
- Working process: Service → Backwash → Brine & Slow Rinse → Fast Rinse → Brine Refill → Service.














C. Usage

After being accomplished installation, parameter setting and trial running, the valve could be put into use. In order to ensure the quality of outlet water can reach the requirement, the user should complete the below works:



 










① Ensure that there is solid salt all the time in the brine tank in the course of using when this valve is used for softening. The brine tank should be added the clean water softening salts only, at least 99.5% pure, forbidding using the small salt and iodized salt.

② Test the outlet water and raw water hardness at regular time. When the outlet water hardness is unqualified, please press the  and the valve will temporary regenerate again (It will not affect the original set operation cycle.)

③ When the feed water hardness change a lot, you can adjust the water treatment capacity as follow:

 Press and hold both  and  for 5 seconds to lift the lock status. Press , and the  light on, then press , the digital area show the control mode. If it shows A-01 or A-02, press  three times, and the digital area will show the given water treatment capacity(If the control mode shows A-03 or A-04, then press  four times, the digital area will show the feed water hardness); Press  again,  and digital flash. Press  or  continuously, reset the capacity value (Or water hardness). Press  and hear a sound “Di”, then finish the adjustment. Press  exit and turn back the service status.

The estimation of water treatment capacity, you can refer to the professional application specification. When select A-03 or A-04 intelligent control mode, the control will automatically calculate the water treatment capacity by setting resin volume, feed water hardness and regeneration factor.

④ For A-01 or A-03 control mode (Delayed regeneration type), please pay attention to whether the time is current or not. If the time is not right, you can adjust as follow: After lifting the lock status, press , the  and “” light on. Then press , the  and hour value flash. Press  or  continuously, reset the hour value; Press  again,  and minute value flash. Press  or  continuously, reset the minute value; Press  and hear a sound “Di”, then finish the adjustment. Press  exit and turn back the service status.


The regeneration parameters have been set when control valve left

factory. Generally, it does not need to reset. If you want enquiry and modify the setting, you can refer to the professional application specification.

3.Applications

3.1.Flow Chart

Flow Chart for 63620/63520

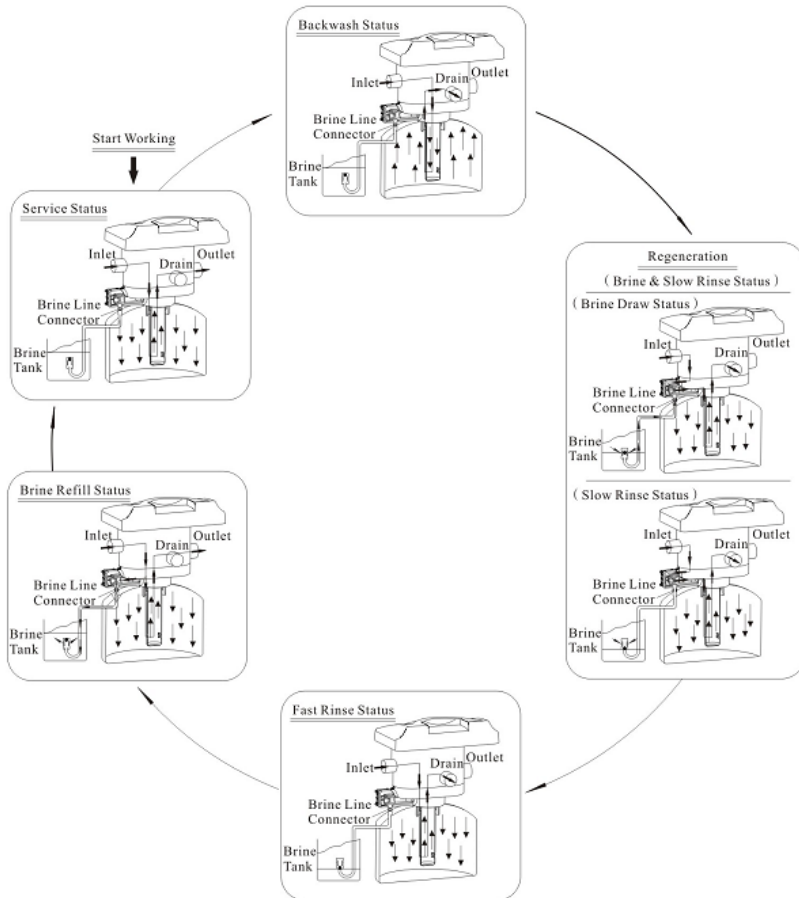


Note: Filter valve 53620/53520 only has working processes: Service, Backwash, and Fast Rinse.

3.2.The Function and Connection of PC Board

Open the front cover of control valve, you will see the main control

board and connection ports as below:

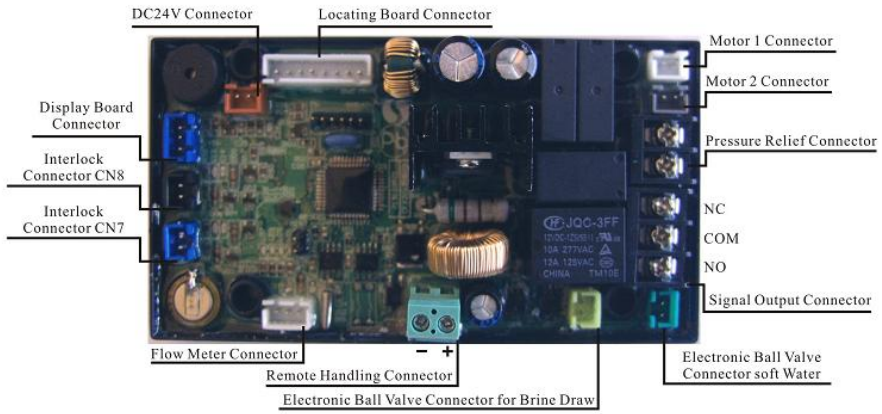

Functions on PC board:

| Function | Application | Explanation |
|------------------------------|---|--|
| Signal output connector b-01 | Outlet solenoid valve | If system strictly require no hard water flow from outlet or controlling the liquid level in water tank. |
| | Inlet pump | Increase pressure for regeneration or washing. Use the liquid level controller to control inlet pump to ensure there is water in tank. |
| Signal output connector b-02 | Inlet solenoid valve or inlet pump | When inlet pressure is high, it needs to close water inlet when valve is rotating to protect motor. |
| Pressure relief connector | Control the inlet bypass to release pressure | When valve is rotating, pressure relief connector opened to prevent pressure increasing rapidly. |
| Interlock connector | To ensure only one control valve regeneration or washing in system. | Use in RO pre-treatment, water supply together but regeneration in turn, second grade ion exchange equipment, etc. |

| | | |
|---------------------------|--|---|
| Remote handling connector | Receipt signal to make the control rotate to next circle | It is used for on-line inspection system, PC connection, and realize automatically or remote controlling valve. |
|---------------------------|--|---|

A.Signal Output Connector

1).Control Solenoid Valve (Set b-01)

①Solenoid valve on outlet controls water level in brine tank.

Instruction: If system strictly require no hard water flow from outlet in regeneration cycle(Mainly for no hard water flow out when valve is switching or valve in backwash or brine drawing position), a solenoid valve could be installed on outlet, the wiring refers to Figure 3-1.

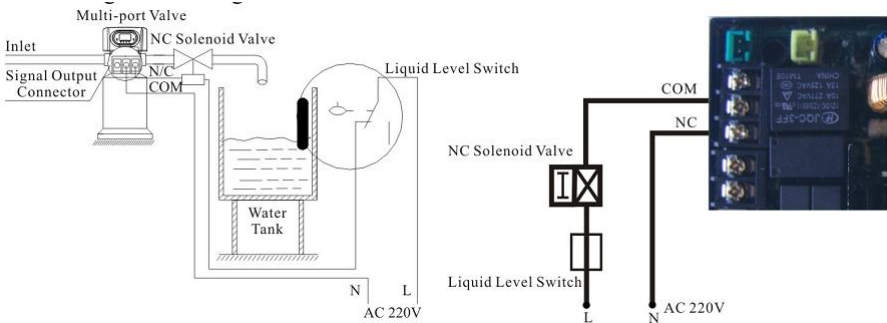


Figure 3-1 Wiring of Solenoid Valve on Outlet

Function:

When valve in service status, if soft water tank is short of water, solenoid valve is opened to supply soft water, but if water tank has enough water, solenoid valve is closed, so no soft water supplied.

When the valve in backwash status, there is no signal output. So, solenoid valve is closed, and no water flow into soft water tank.

② Solenoid valve on inlet(Set b-02)

Instruction: When inlet pressure exceeds 0.6MPa, install a solenoid valve on inlet. Control mode is b-02. Pressure relieved when valve switching, the wiring refers to Figure 3-2. As Figure 3-3 shows, it also can use the pressure relief port to work.

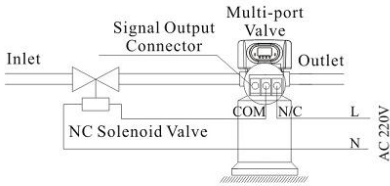


Figure 3-2 Wiring of Solenoid Valve on Inlet

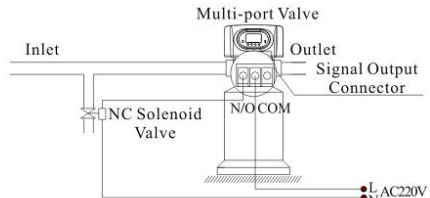


Figure 3-3 Wiring of Pressure Relief Port

Instruction:

When inlet pressure is high, install a solenoid valve on inlet to ensure valve switching properly. When valve is exactly at position of Service, Backwash, Brine & Slow Rinse, Brine Refill and Fast Rinse, solenoid valve is open. When valve is switching, solenoid valve is closed, no water flow into valve to ensure valve switching properly. It could prevent the problem of mix water and water hammer.

Use interlock cable to realize valves in parallel and series in same system which is suited for RO pretreatment system or second grade Na⁺ system. The wiring refers to Figure 3-4:

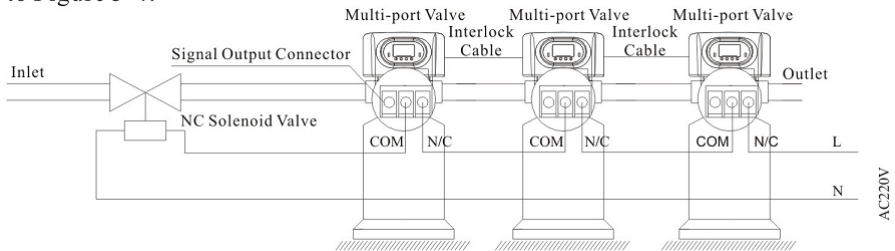


Figure 3-4 Wiring of Solenoid Valve on Inlet

2).Liquid Level Controller Controls Inlet Pump(Two-phase motor)(Set b-01)

Instruction: For the system using well or middle-tank supplying water, switch of liquid level controller and valve together to control pump opening or closing. The wiring refers to Figure 3-5:

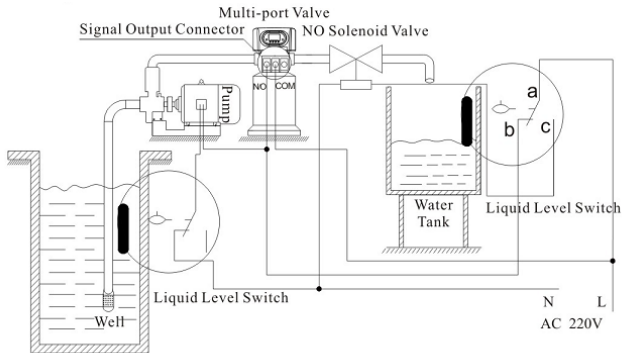


Figure 3-5 Wiring of Liquid Level Controller Controlling Inlet Pump

Function:

When valve in service status, if water tank is short of water, start up pump, but if water tank has enough water, the switch of liquid level controller is closed, so pump doesn't work.

When valve in regeneration cycle, inlet always has water no matter what is water condition in water tank. As for Runxin valve, no water passing outlet in regeneration cycle, which ensures no water fill into brine tank. A liquid switch at the top opening well or in middle water tank in RO system protects pump from working without water in case of out of raw water.

3).Liquid Level Switch in Water Tank Controls Inlet Pump (Three-phase, Figure 3-6) (Set b-01)

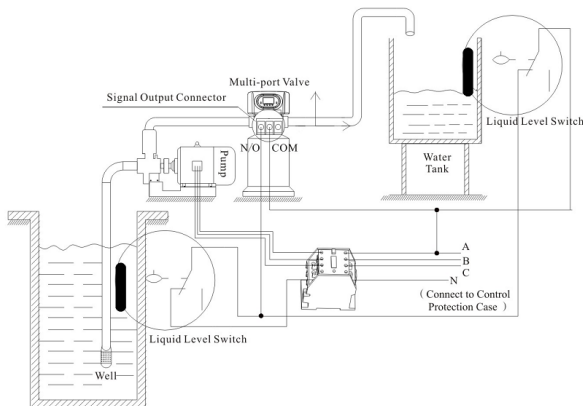


Figure 3-6 Wiring of Liquid Level Controller Controlling 380V Inlet Pump

4).Control Inlet Booster Pump(Set b-01 or b-02)

Instruction: If inlet water pressure is less than 0.15 MPa, which makes rinse drawing difficult, a booster pump is suggested to be installed on inlet. Control mode is b-01. When system in regeneration cycle, booster pump is open, the wiring refers to Figure 3-7.If the booster pump current is bigger than 5A, system needs to install a contactor, the wiring refers to Figure 3-8

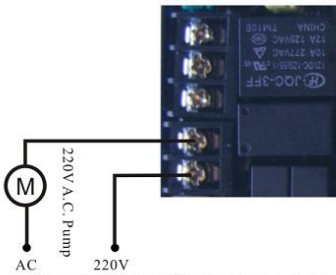


Figure 3-7 Wiring of Booster Pump on Inlet

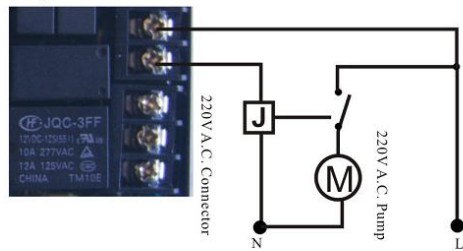


Figure 3-8 Wiring of Booster Pump on Inlet

B.Interlock

Instruction: In the parallel water treatment system, it ensures only one valve in regeneration or washing cycle and (n-1) valves in service, that is, realizing the function of supplying water simultaneously and regenerating individually.

In the series water treatment system which is suited for RO pretreatment system or second grade Na⁺ system, it ensures only one valve in regeneration or washing cycle and every grade has water when in regeneration or washing. Wiring refers to Figure 3-9

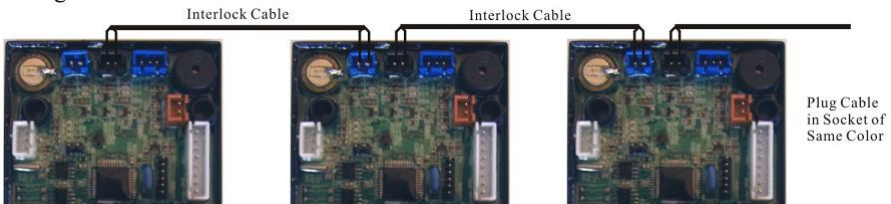


Figure 3-9 Network System Wiring with Interlock Cable

Use interlock cable to connect CN8 to CN7 on next valve in the loop.

One system with several valves, if interlock cable is disconnected, the system is divided into two individual systems.

C. Pressure Relief Output

Runxin valve will cut off feeding water to drain line when it switches in regeneration cycles. Thus in some water treatment systems, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising so fast to damage the valve. Pressure Relief Output can be used to avoid this problem. The wiring refers to Figure 3-10.

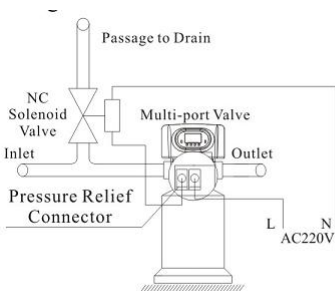


Figure 3-10 Wiring of Pressure Relief Output

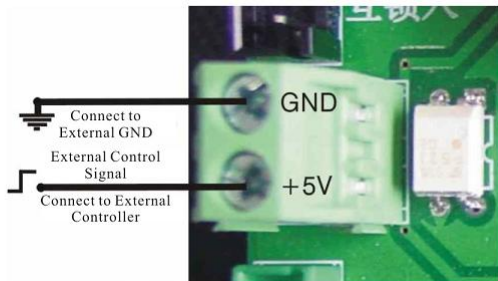


Figure 3-11 Wiring of Remote Input

D. Remote Handling Connector

Online TDS meter monitors treated water other than a flow meter, or PLC controls the regeneration time. When the controller receives a contact closure from above instruments, regeneration begins. The wiring refers to Figure 3-11.

E. Interlock System

2 or more than 2 valves are interlocked connecting in one system and all valves are in service but regenerate individually. The wiring refers to Figure 3-12.

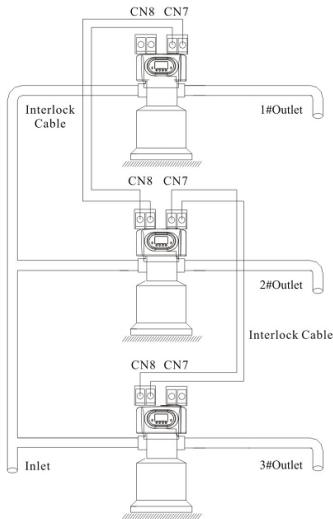


Figure 3-12 Interlock System

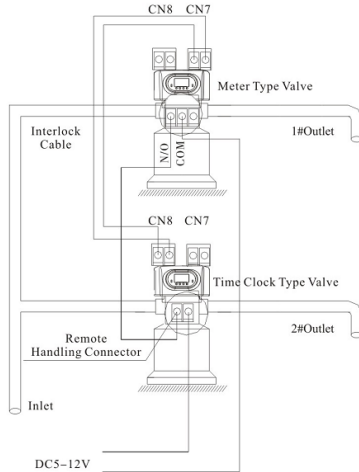


Figure 3-13 Series System

F.Series System

This is 2 or more than 2 valve systems, all in service, with one flow meter for the entire system. For the time type valve, the regeneration time should be set and adjusted to the Max; for the volume type valve, connect its signal output connector with the remote handle connector of the time type valve. That can realize the function of supplying water simultaneously and regenerating orderly. The wiring refers to Figure 3-13:

3.3.System Configuration and Flow Rate Curve

A.Product Configuration

Fixed bed & softener valve configuration with tank, resin volume, brine tank and injector.

| Tank Size (mm) | Resin Volume (L) | Flow Rate(t/h) | Brine Tank Size (mm) | The Minimum Salt Consumption for Regeneration | Injector Model |
|-------------------|------------------------|-------------------|-------------------------|---|-------------------|
| | | | | | |

MODEL 53520/53620/63520/63620

| | | | | | |
|------------|------|------|------------|--------|------|
| | | | | (Kg) | |
| φ900×2400 | 900 | 16.0 | φ1080×1460 | 135.00 | 7703 |
| φ1000×2400 | 1100 | 20.0 | φ1240×1575 | 165.00 | 7704 |
| φ1200×2400 | 1500 | 28.0 | φ1360×1690 | 225.00 | 7705 |

Attention: The flow rate calculation is based on linear velocity 25m/h; the minimum salt consumption for regeneration calculation is based on salt consumption 150g / L (Resin).

Filter valve configuration with tank, resin volume, brine tank and injector.


| Tank Size | Filter Material Volume | Carbon Filter Valve | | Sand Filter Valve | |
|-----------|------------------------|---------------------|--------------------|---------------------|--------------------|
| | | Filtering Flow Rate | Backwash Flow Rate | Filtering Flow Rate | Backwash Flow Rate |
| mm | L | m ³ /h | m ³ /h | m ³ /h | m ³ /h |
| φ750×1800 | 450 | 5.3 | 15.9 | 11 | 23.8 |
| φ900×2400 | 900 | 7.6 | 22.9 | 15.9 | 34.3 |

Attention: Above filtering flow rate of the carbon filter valve calculated based on linear velocity 12m/h; the backwash flow rate of the carbon filter valve calculated based on the strength of backwash 10L/(m²*s). Filtering flow rate of the sand filter valve calculated based on linear velocity 25m/h; the backwash flow rate of the sand filter valve calculated based on the strength of backwash 15L/(m²*s).


B.Flow Rate Characteristic

1).Pressure-flow Rate Curve

Filter Valve 53620/53520:

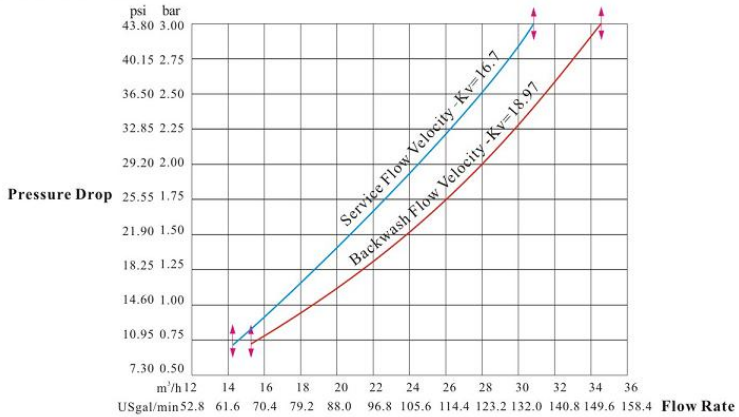

Softener Valve 63620/63520/:

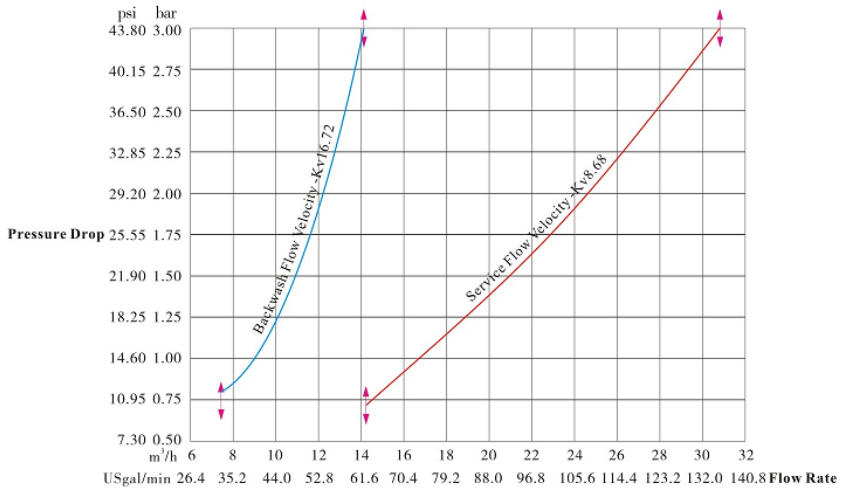

2).Injector Parameter Table

Fixed Bed 63620/63520:

| Inlet Pressure | Draw Rate (L/M) | | |
|----------------|-----------------|-------------|-----------|
| | MPa | 7703 Yellow | 7704 Blue |
| 0.20 | 39.00 | 49.00 | 55.17 |
| 0.25 | 45.00 | 55.70 | 63.72 |
| 0.30 | 49.80 | 63.50 | 69.20 |
| 0.35 | 54.30 | 68.00 | 73.03 |
| 0.40 | 57.60 | 72.00 | 76.50 |

3).Configuration for Standard Injector and Drain Line Flow Control

Fixed Bed 63620/63520:

| Tank Dia. mm | Injector Model | Injector Color | Draw Rate | Slow Rinse | Brine Refill Flow Rate | DLFC Holes Quantity&Dia. | Backwash / Fast Rinse |
|--------------|----------------|----------------|-----------|------------|------------------------|--------------------------|-----------------------|
| | | | L/m | L/m | L/m | | t/h |
| 900 | 7703 | Yellow | 49.8 | 34.0 | 45.5 | 1×φ6 | 11 |
| 1000 | 7704 | Blue | 63.5 | 44.5 | 45.5 | 3×φ6 | 13 |
| 1200 | 7705 | White | 69.2 | 49.2 | 47.0 | 6×φ6 | 17 |

Remark:

- Above data for the product configuration and relevant characteristics are only for reference. When put in practice, please subject to the different requirements of raw water hardness and application.
- Above parameter is tested under 0.3MPa inlet pressure.
- Holes quantity is the holes number on DLFC. Diameter of hole is φ6, the number refers to above table.
- Injectors 7703, 7704, 7705 correspond to material numbers 5468019, 5468020, 5468021.

3.4.Parameter Settlement

①Service time T1

Water treatment capacity:

$$Q = V_R \times K \div Y_D \quad (\text{m}^3)$$

- _____ Hardness of inlet water (mmol/L)
- _____ Exchange factor (mmol/L) 400~1000.
Down-flow regeneration, take 400~750. Up-flow regeneration, take 450~1000. If the inlet water hardness is higher, the factor is smaller.
- _____ Resin volume (m³)

By days: $T1 = Q \div Q_d \quad (\text{Day})$

- _____ Water treatment capacity per day (m³/d)
- _____ Water treatment capacity (m³)

② Backwash time T2

It is subject to the turbidity of inlet water. Generally, it is suggested to be set 10~15 minutes. The higher the turbidity is, the longer backwash time can be set. However, if the turbidity is more than 5 FTU, it should be better to install a filter in front of the exchanger.

③ Brine & slow rinse time T3

$$T3 = (40 \sim 50) \times H_R \quad (\text{min})$$

Generally, $T3 = 45 H_R \quad (\text{min.})$

In this formula, H_R — The height of resin in exchange tank (m.)

④ Brine refill time T4

Down-flow regeneration: $T4 = 0.45 \times V_R \div \text{Brine refill speed} \quad (\text{min.})$

Up-flow regeneration: $T4 = 0.34 \times V_R \div \text{Brine refill speed} \quad (\text{min.})$

In this formula, V_R — Resin volume (m³)

The Brine refill speed is related to inlet water pressure. It is suggested to lengthen 1~2 minutes of calculated brine refilling time to make sure there is enough water in tank. (The condition is that there is a level controller installed in the brine tank)

⑤ Fast rinse time T5

$$T5 = 12 \times H_R \quad (\text{min})$$

Generally, the water for fast rinse is 3~6 times of resin volume. It is suggested to be set 10~16 minutes, but subject to the outlet water

reaching the requirement.

⑥ Exchange factor

Exchange factor = $E / (k \times 1000)$

In this formula, E—Resin working exchange capability (mol/m^3), it is related to the quality of resin. Down-flow regeneration, take 800~900. Up-flow regeneration, take 900~1200.









K—Security factor, always take 1.2~2. it is related to the hardness of inlet water: the higher the hardness is, the bigger the K is.

⑦ Regeneration time: The whole cycle for regeneration is about two hours. Please try to set up the regeneration time when you don't need water according to the actual situation.


The calculation of parameters for each step is only for reference, the actual proper time will be determined after adjusting by water exchanger supplier. This calculation procedure of softener is only for industrial application; it is not suitable for small softener in residential application.

3.5. Parameter Enquiry and Setting


3.5.1. Parameter Enquiry

When  light on, press and hold both  and  for 5 seconds to lift the button lock status; then press  and  light on, enter to program display mode; press  or  to view each value according to below process. (Press  exit and turn back to service status)


**63620:Take A-01
as a sample**

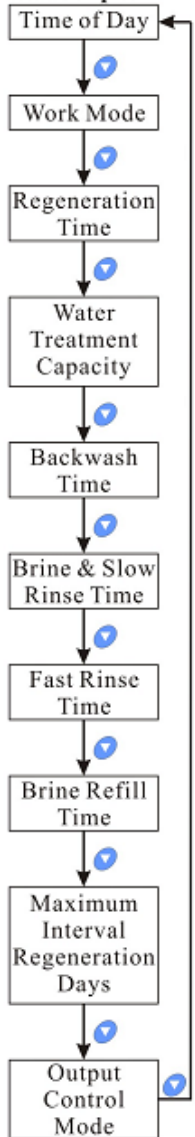


63520:

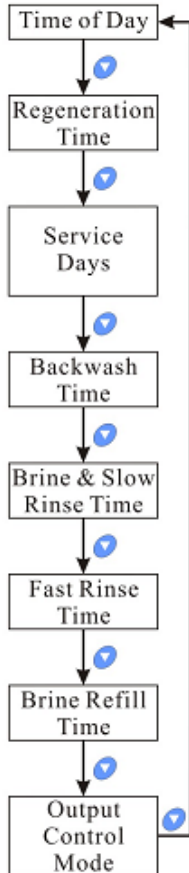

**53620:Take A-01
as a sample**

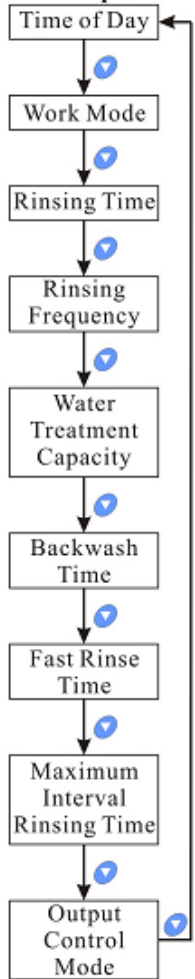

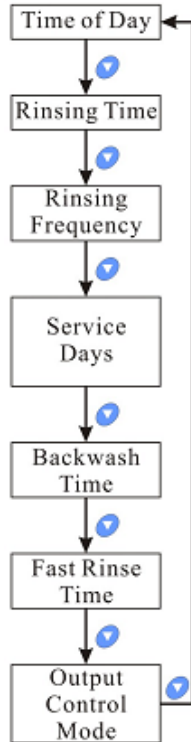

53520:





 
 
 













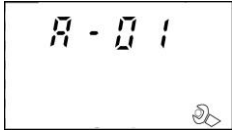


 







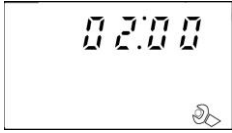








 



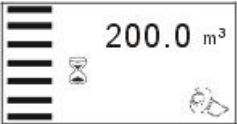
 



 










 
 















 
3.5.2.Parameter Setting (Take 63620 A-01 as a sample)


















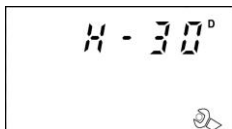
 





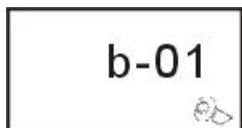
In program display mode, press  and enter into program set mode.

Press  or  to adjust the value.









3.5.3.The Steps of Parameter Setting






| Items | Process Steps | Symbol |
|-------------------|--|--|
| Time of Day | <p>When time of day “12:12” continuously flash, it reminds to reset;</p> <p>1. Press  to enter into program display mode; both  and “” symbol light on, “:” flash; Press , both  and hour value flash, through  or  to adjust the hour value;</p> <p>2. Press  again, both  and hour value flash, through  or  to adjust the minute value;</p> <p>3. Press  and hear a sound “Di”, then finish adjustment, press  to turn back.</p> |  |
| Control Mode | <p>1. In control mode display status, press  and enter into program set mode,  and 01 value flash;</p> <p>2. Press  or , set the value to be A-01, A-02, A-03 or A-04 control mode</p> <p>3. Press  and hear a sound “Di”, then finish adjustment, press  to turn back.</p> |  |
| Regeneration Time | <p>1. In regeneration time display status, press  and enter into program set mode.  and 02 flash; Press  or  to adjust the hour value;</p> <p>2. Press  again,  and 00 flash, press  or  to adjust the minute value;</p> <p>3. Press  and hear a sound “Di”, then finish adjustment, press  to turn back.</p> |  |

| | | |
|-----------------------------------|---|--|
| <p>Water Treatment Capacity</p> | <p>1. In water treatment capacity display status, it shows  and 200.0. Press  and enter into program set mode.  and 200 flash;</p> <p>2. Press  or  to adjust the integer of water treatment capacity value;</p> <p>3. Press  and decimal part flash. Press  or  to adjust the decimal of water treatment capacity value;</p> <p>4. Press  to finish adjustment, press  to turn back.</p> |  |
| <p>Backwash Time</p> | <p>1. In backwash time display status, it shows  and 2-10:00. Press  and enter into program set mode.  and 10 flash;</p> <p>2. Press  or  to adjust the minutes of backwash;</p> <p>3. Press  and 00 flash. Press  or  to adjust the seconds of backwash;</p> <p>4. Press  to finish adjustment, press  to turn back.</p> |  |
| <p>Brine& Slow Rinse Time</p> | <p>1. In brine& slow rinse time display status, it shows  and 3-60:00. Press  to enter into program set mode.  and 60 flash;</p> <p>2. Press  or  to adjust the minutes of brine;</p> <p>3. Press  and 00 flash. Press  or  to adjust the seconds of brine;</p> <p>4. Press  to finish adjustment, press  to turn back.</p> |  |
| <p>Fast Rinse Time</p> | <p>1. In fast rinse time display status, it shows  and 4-10:00. Press  to enter into program set mode.  and 10 flash;</p> <p>2. Press  or  to adjust the minutes of fast rinse;</p> <p>3. Press  and 00 flash. Press  or  to adjust the seconds of fast rinse;</p> <p>4. Press  to finish adjustment, press  to turn</p> |  |

| | | |
|------------------------------------|---|---|
| | back. | |
| Brine Refill Time | <p>1. In brine refill time display status, it shows  and 5-05:00, Press  and enter into program set mode.  and 05 flash;</p> <p>2. Press  or  to modify the minutes of brine refill;</p> <p>3. Press  and 00 flash. Press  or  to adjust the seconds of brine refill;</p> <p>4. Press  to finish adjustment, press  to turn back.</p> |  |
| Maximum Interval Regeneration Days | <p>1. In maximum interval regeneration days display status, it shows H-30. Press  and enter into program set mode.  and 30 flash;</p> <p>2. Press  or  to adjust the interval regeneration days;</p> <p>3. Press  to finish adjustment, press  to turn back.</p> |  |
| Signal Output Mode | <p>1. In signal output mode display status, it shows b-01. Press  and enter into program set mode.  and 01flash;</p> <p>2. Press  or  to adjust the mode;</p> <p>3. Press  to finish adjustment, press  to turn back.</p> |  |

For example, the fast rinse time of a softener is 12 minutes. After regenerating, the chloridion in the outlet water is always higher than normal, indicating that the time is not enough for fast rinse. If you want the time to set to 15 minutes, the modification steps as follows:

- ① Press and hold both  and  to lift the button lock status (light off);
- ② Press , and  light on;
- ③ Press  or  continuously until  light on. Then the digital area shows: 4-12:00M;



- ④ Press ,  and 12 flash;
- ⑤ Press  continuously until 12 changed to 15;
- ⑥ Press , there is a sound “Di” and the figure stop flashing; the program back to enquiry status
- ⑦ If you want to adjust other parameters, you can repeat the steps from ② to ⑤. If you don't, press  and quit from the enquiry status, the display will show the current service status.

3.6. Trial Running


After installing the multi-functional flow control valve on the resin tank with the connected pipes, as well as setting up the relevant parameter, please conduct the trial running as follows:



A. Close the inlet valve B & C, and open the bypass valve A. After cleaning the foreign materials in the pipe, close the bypass valve A. (As Figure 1-4 shows)

B. Fill the brine tank with the planned amount of water and adjust the air check valve. Then add solid salt to the tank and dissolve the salt as much as possible.



C. Switch on power. Press  and go in the Backwash position; when  light on, slowly open the inlet valve B to 1/4 position, making the water flow into the resin tank; you can hear the sound of air-out from the drain pipeline. After all air is out of pipeline, then open inlet valve B completely and clean the foreign materials in the resin tank until the outlet water is clean. It will take 8~10 minutes to finish the whole process.



D. Press , turning the position from Backwash to Brine & Slow Rinse;

 light on and enter in the process of Brine & Slow Rinse. The air check valve close when control valve finished sucking brine, then slow rinse start to work. It is about 60~65 minutes for whole process.


E. Press , turning the position from Brine & Slow Rinse to Fast Rinse.  light on. It takes about 10~15 minutes, take out some outlet water for testing: if the water hardness reach the requirement, and the chloridion

in the water is almost the same compared with the inlet water, then go to the next step.

F.Press  , turning the position from Fast Rinse to Brine Refill.  light on and it indicates the brine tank is being refilled with water to the required level. It takes about 5~6 minutes, then add solid salt to the brine tank.

G.Press  , making the control valve return to Service Status;  light on and start to running.

Note:

- When the control valve enter into the regeneration status, all program can be finished automatically according to the setting time; if you want one of steps terminated early, you can press .
- If water inflows too fast, the media in tank will be damaged. When water inflows slowly, there is a sound of air emptying from drain pipeline.
- After changing resin, please empty air in the resin according to the above Step C.
- In the process of trial running, please check the water situation in all positions, ensuring there is no resin leakage.
- The time for Backwash, Brine& Slow Rinse, Brine Refill and Fast Rinse position can be set and executed according to the calculation in the formula or suggestions from the control valve suppliers.

3.7.Trouble-Shooting

A.Control Valve Fault

| Problem | Cause | Correction |
|----------------------------------|--|--|
| 1. Softener fails to regenerate. | A. Electrical service to unit has been interrupted. B. Regeneration cycles set incorrect. C. Controller is defective. D. Motor fails to work. | A. Assure permanent electrical service (Check fuse, plug, pull chain or switch). B. Reset regeneration cycles. C. Replace controller. D. Replace motor. |

MODEL 53520/53620/63520/63620

| | | |
|---|---|--|
| <p>2. Regeneration time is not correct.</p> | <p>A. Time of day not set correctly. B. Power failure more than 3 days.</p> | <p>Check program and reset time of day.</p> |
| <p>3. Softener supply hard water.</p> | <p>A. Bypass valve is open or leaking. B. No salt in brine tank. C. Injector plugged. D. Insufficient water flowing into brine tank. E. Internal valve leak. F. Regeneration cycles not correct. G. Shortage of resin. H. Bad quality of feed water or turbine blocked.</p> | <p>A. Close or repair bypass valve. B. Add salt to brine tank and maintain salt level above water level. C. Change or clean injector. D. Check brine tank refill time. E. Change valve body. F. Set correct regeneration cycles in the program. G. Add resin to mineral tank and check whether resin leaks. H. Reduce the inlet turbidity, clean or replace turbine.</p> |
| <p>4. Softener fails to draw brine.</p> | <p>A. Line pressure is too low. B. Brine line is plugged. C. Brine line is leaking. D. Injector is plugged. E. Internal control leak. F. Drain line is plugged. G. Sizes of injector and DLFC not match with tank. H. Ball valve or cable failure</p> | <p>A. Increase line pressure. B. Clean brine line. C. Replace brine line. D. Clean or replace new parts. E. Replace valve body. F. Clean drain line flow control. G. Select correct injector size and DLFC according to the instruction manual. H. Replace ball valve or cable.</p> |
| <p>5. Unit used too much salt.</p> | <p>A. Improper salt setting. B. Excessive water in brine tank.</p> | <p>A. Check salt usage and salt setting. B. See problem no.6.</p> |

Control Valve Fault (Continue)

| | | |
|---|--|--|
| <p>6. Excessive water in brine tank.</p> | <p>A. Overlong refilling time. B. Foreign material in brine line. C. Foreign material in brine valve and plug drain line flow control. D. Not install safety brine valve but power failure while salting. E. Safety brine valve breakdown. F. Ball valve doesn't close.</p> | <p>A. Reset correct refilling time. B. Clean brine line. C. Clean brine valve and brine line. D. Stop water supplying and restart or install safety brine valve in salt tank. E. Repair or replace safety brine valve. F. Close or replace ball valve or cable.</p> |
| <p>7. Pressure lost or iron in conditioned water.</p> | <p>A. Iron in the water supply pipe. B. Iron mass in the softener. C. Fouled resin bed. D. Too much iron in the raw water.</p> | <p>A. Clean the water supply pipe. B. Clean valve and add resin cleaning chemical, increase frequency of regeneration. C. Check backwash, brine draw and brine tank refill. Increase frequency of regeneration and backwash time. D. Iron removal equipment is required to install before softening.</p> |
| <p>8. Loss of mineral through drain line.</p> | <p>A. Air in water system. B. Bottom strainer broken. C. Improperly sized drain line control.</p> | <p>A. Assure that well system has proper air eliminator control. B. Replace new bottom strainer. C. Check for proper drain rate.</p> |
| <p>9. Control cycle continuously.</p> | <p>A. Locating signal wiring breakdown. B. Controller is faulty. C. Foreign material stuck the driving gear. D. Time of regeneration steps were set to zero.</p> | <p>A. Check and connect locating signal wiring. B. Replace controller. C. Take out foreign material. D. Check program setting and reset.</p> |
| <p>10. Drain flows continuously.</p> | <p>A. Internal valve leak. B. When electricity fails to supply, valve stops</p> | <p>A. Check and repair valve body or replace it. B. Adjust valve to service position</p> |

| | | |
|---|--|--|
| | backwash or rapid rinse position. | or turn off bypass valve and restart when electricity supply. |
| 11. Interrupted or irregular brine. | A. Water pressure too low or not stable. B. Injector is plugged or faulty. C. Air in resin tank. D. Floccules in resin tank during backwash. | A. Increase water pressure. B. Clean or replace injector. C. Check and find the reason. D. Clean the floccules in resin tank. |
| 12. Water flow out from drain or brine pipe after regeneration. | A. Foreign material in valve which makes valve can't be closed completely. B. Hard water mixed in valve body. C. Water pressure is too high which result in valve doesn't get the right position. D. Ball valve is not shut-off completely. | A. Clean foreign material in valve body. B. Change valve core or sealing ring. C. Reduce water pressure or use pressure release function. D. Repair ball valve or replace it. |

Control Valve Fault (Continue)

| | | |
|---------------------------------|---|---|
| 13. Salt water in soften water. | A. Foreign material in injector pr injector fails to work. B. Brine valve cannot be shut-off. C. Time of rapid rinse too short. | A. Clean and repair injector. B. Repair brine valve and clean it. C. Extend rapid rinse time. |
|---------------------------------|---|---|

| | | |
|-------------------------------------|---|---|
| <p>14. Unit capacity decreases.</p> | <p>A. Unit fails to regenerate or regenerate not properly. B. Resin is fouled or bad. C. Salt setting not proper. D. Softener setting not proper. E. Raw water quality deterioration. F. Turbine of flow meter is stuck.</p> | <p>A. Regenerate according to the correct operation requirement. B. Increase backwash flow rate and time, clean or change resin. C. Readjust brine drawing time. D. According to the test of outlet water, recount and reset. E. Regenerate unit by manual temporary then reset regeneration cycle. F. Disassemble flow meter and clean it or replace a new turbine.</p> |
|-------------------------------------|---|---|

B.Controller Fault


| Problem | Cause | Correction |
|--|---|---|
| <p>1. All indicators display on front panel.</p> | <p>A. Wiring of front panel with controller fails to work. B. Control board is faulty. C. Transformer damaged. D. Electrical service not stable. E. Display board is faulty.</p> | <p>A. Check and replace the wiring. B. Replace control board. C. Check and replace transformer. D. Check and adjust electrical service. E. Replace display board.</p> |
| <p>2. No display on front panel.</p> | <p>A. Wiring of front panel with controller fails to work. B. Front panel damaged. C. Control board damaged. D. Adapter damaged.</p> | <p>A. Check and replace wiring. B. Replace front panel. C. Replace control board. D. Replace adapter.</p> |
| <p>3. E11 Flash</p> | <p>A. Wiring of locating board with controller fails to work. B. Locating board damaged. C. Mechanical driven failure. D. Faulty control board. E. Wiring of motor with controller is fault. F. Motor 1 damaged.</p> | <p>A. Replace wiring. B. Replace locating board. C. Check and repair mechanical part. D. Replace control board. E. Replace wiring. F. Replace motor 1.</p> |

MODEL 53520/53620/63520/63620

| | | |
|---------------------------|---|--|
| <p>4. E21 Flash</p> | <p>A. Wiring of locating board with controller fails to work. B. Locating board damaged. C. Mechanical driven failure. D. Control board damaged. E. Wiring of motor with controller fails to work. F. Motor 2 damaged.</p> | <p>A. Replace wiring. B. Replace locating board. C. Check and repair mechanical part. D. Replace control board. E. Replace wiring of motor with controller. F. Replace motor 2.</p> |
| <p>5.E12 or E22 Flash</p> | <p>A. Hall component on locating board damaged. B. Wiring of locating board with controller fails to work. C. Control board damaged.</p> | <p>A. Replace locating board. B. Replace wiring. C. Replace control board.</p> |
| <p>6.E3 or E4 Flash</p> | <p>A. Control board is faulty.</p> | <p>A. Replace control board.</p> |

3.8.Assembly & Parts

63620 Structure:

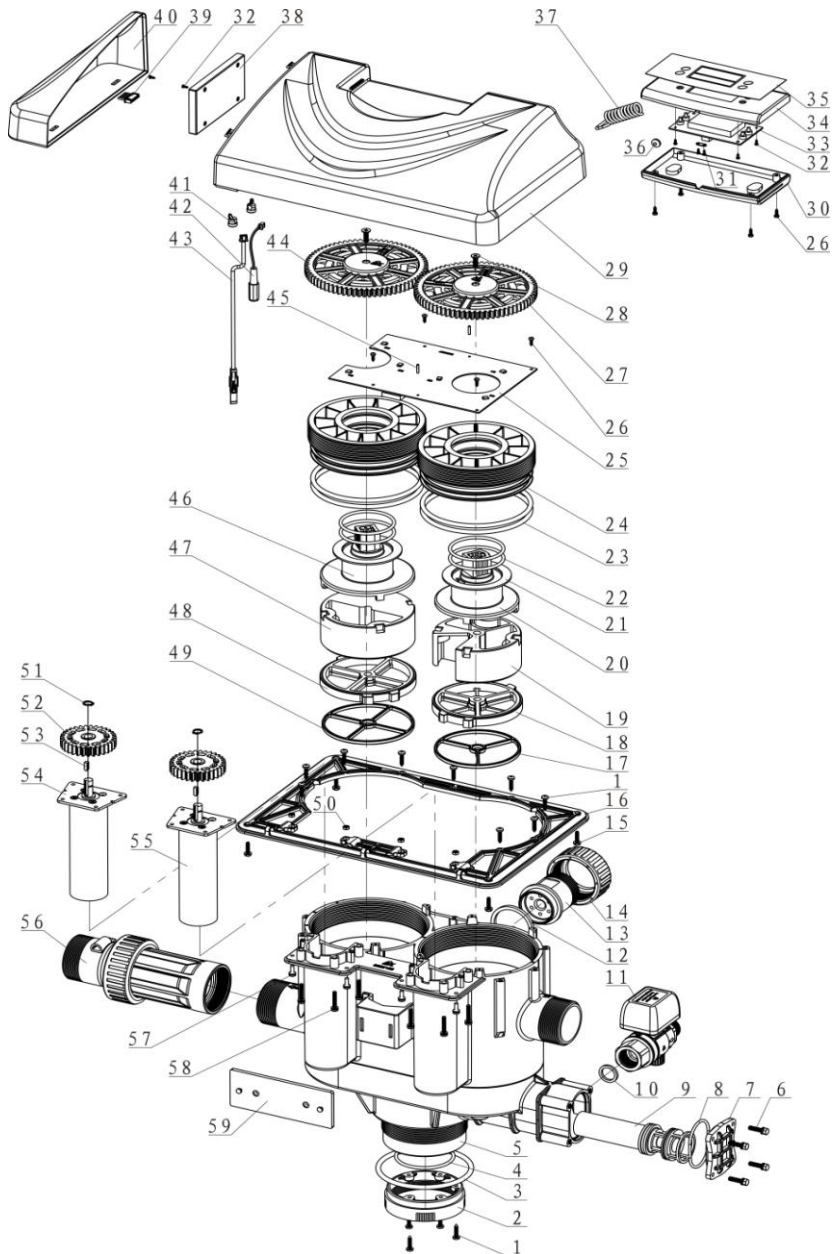

MODEL 53520/53620/63520/63620

63620 Valve Body Components and Part No.:

| Item No. | Description | Part No. | Quantity | Item No. | Description | Part No. | Quantity |
|----------|--------------------------|----------|----------|----------|-------------------------|----------|----------|
| 1 | Screw, Cross ST3.9X19 | 8909003 | 13 | 31 | Cable Clip | 8126001 | 1 |
| 2 | Connector | 8458018 | 1 | 32 | Screw, Cross ST2.2X6.5 | 8909004 | 8 |
| 3 | O-ring 104.6X5.7 | 8378146 | 1 | 33 | Display Board | 6381007 | 1 |
| 4 | O-ring 63X3.55 | 8378163 | 1 | 34 | Board Front Cover | 8300013 | 1 |
| 5 | Valve Body | 5022085 | 1 | 35 | Sticker | 8865011 | 1 |
| 6 | Hexagonal Bolt Set M5×20 | 5851006 | 4 | 36 | Bushings | 8126006 | 1 |
| 7 | Injector Cover | 8315007 | 1 | 37 | Three-core Spring | 5517001 | 1 |
| 8 | O-ring 52X3 | 8378096 | 1 | 38 | Control Board | 6382049 | 1 |
| 9 | Injector | 5468020 | 1 | 39 | Wire for Locating Board | 5511016 | 1 |
| 10 | Seal Ring | 8371019 | 1 | 40 | Front Cover | 8300032 | 1 |
| 11 | Electronic Ball Valve | 2976064 | 1 | 41 | Toggle | 8126004 | 2 |
| 12 | Seal Ring | 8371008 | 1 | 42 | Wire for Power | 5513001 | 1 |
| 13 | Flow Control | 8468049 | 1 | 43 | Probe Wire | 6386010 | 1 |
| 14 | Animated Connector | 8947005 | 1 | 44 | Gear | 5241018 | 1 |
| 15 | Hexagonal Bolt ST3.9X16 | 8909016 | 4 | 45 | Pin 2.5X12 | 8993004 | 2 |
| 16 | Junction Plate | 8152019 | 1 | 46 | Shaft | 8258027 | 1 |
| 17 | Seal Ring | 8370078 | 1 | 47 | Moving Disk | 8459072 | 1 |
| 18 | Fixed Disk | 8469072 | 1 | 48 | Fixed Disk | 8469074 | 1 |
| 19 | Moving Disk | 8459071 | 1 | 49 | Seal Ring | 8370079 | 1 |
| 20 | Shaft | 8258005 | 1 | 50 | Hexagonal Nut | 8940002 | 4 |

MODEL 53520/53620/63520/63620

| | | | | | | | | |
|----|---------------------------|---------|----|--|----|---------------------------|---------|---|
| 21 | Anti-friction Washer | 8216006 | 2 | | 51 | Locking Ring | 8994009 | 2 |
| 22 | O-ring 59.92X3.53 | 8378110 | 4 | | 52 | Small Gear | 8241008 | 2 |
| 23 | O-ring 123.19X5.33 | 8378161 | 4 | | 53 | Pin 2.5X12 | 8971001 | 2 |
| 24 | Pressure Nut | 8092035 | 2 | | 54 | Motor | 6158039 | 1 |
| 25 | Locating Board | 6380027 | 1 | | 55 | Motor | 6158038 | 1 |
| 26 | Screw, Cross ST2.9X9.5 | 8909008 | 12 | | 56 | Flow Meter | 5447003 | 1 |
| 27 | Gear | 5241017 | 1 | | 57 | Screw, Cross Set M4×12 | 8902005 | 4 |
| 28 | Screw, Cross ST4.8X19 | 8909018 | 2 | | 58 | Screw, Cross M4X25 | 8902008 | 8 |
| 29 | Dust Cover | 8005037 | 1 | | 59 | Display Shelf | 8040003 | 1 |
| 30 | Board Back Cover | 8315008 | 1 | | | | | |


Note:

63520 there are no item 43, 56 compared to 63620.

53620 there are no item 10, 11 compared to 63620, but increase one piece seal ring 8371019 and one piece blind nut 8940004.

53520 there are no item 10, 11, 43, 56 compared to 63620, but increase one piece seal ring 8371019 and one piece blind nut 8940004.

5447003 Flow meter structure:

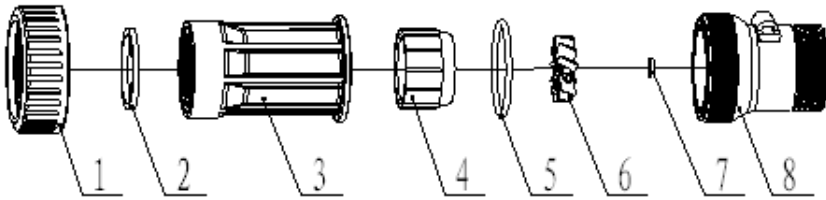

5447003 Flow Meter Components and Part No.:


| Item No. | Description | Part No. | Quantity | Item No. | Description | Part No. | Quantity |
|----------|--------------------|----------|----------|----------|------------------|----------|----------|
| 1 | Animated Connector | 8947004 | 1 | 5 | O-ring 60X4 | 8378137 | 1 |
| 2 | Seal Ring | 8371008 | 1 | 6 | Turbine | 5436005 | 1 |
| 3 | Connector | 8458016 | 1 | 7 | Bush | 8210002 | 1 |
| 4 | Fixed Connector | 8109006 | 1 | 8 | Flow Meter Shell | 5002002 | 1 |

4.Warranty Card

Dear client:

This warranty card is the guarantee proof of RUNXIN brand multi-functional flow control valve. It is kept by client self. You could get the after-sales services from the supplier which is appointed by RUNXIN manufacturer. Please keep it properly. It couldn't be retrieved if lost. It couldn't be repaired free of charge under the below conditions:

1. Guarantee period expired.(One year)
2. Damage resulting from using, maintenance, and keeping that are not in accordance with the instruction.
3. Damage resulting from repairing not by the appointed maintenance personnel.
4. Content in guarantee proof is unconfirmed with the label on the real good or be altered.
5. Damage resulting from force majeure.

| | | | | | |
|-----------------------|--|------------------------|--|---------------------------|--|
| Product Name |  Multi-functional Flow Control Valve for Water Treatment Systems | | | | |
| Model | | | | Code of Valve Body | |
| Purchase Company Name | | | | Tel/Cel. | |
| Problem | | | | | |
| Solution | | | | | |
| Date of Repairing | | Date of Accomplishment | | Maintenance Man Signature | |

When product need warranty service, please fill in the below content and sent this card together with the product to the appointed suppliers or

MODEL 53520/53620/63520/63620

Runxin company.

| | | | |
|--|-----------------------------------|---------------------|--|
| End-user Company Name | | Tel/Cel. | |
| Purchase Company Name | | Tel/Cel. | |
| Model | | Code of Valve Body | |
| Tank Size $\varphi \times$ | Resin Tank Size L | Hardness mmol/L | |
| Water source: Ground-water <input type="checkbox"/> Tap Water <input type="checkbox"/> | Water Treatment Capacity m^3 | Backwash Time min | |
| Brine & Slow Rinse Time min | Brine Refill Time min | Fast Rinse Time min | |
| Problem Description | | | |

WENZHOU RUNXIN MANUFACTURING MACHINE CO., LTD.

ADD: Jinger Road, Shatou Group, Linjiang, Lucheng District,
Wenzhou, Zhejiang, China

TEL: 0577-88635628 88630038 FAX: 0577-88633258

<http://www.run-xin.com> Email:sales@run-xin.com