Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

MECHANIC GUIDE

INDUSTRIAL WATER SOFTENER EQUIPMENTS

Volume-controlled two columned water softener equipments with one control valve

Volume-controlled Two columned
BlueSoft-40D3/73
BlueSoft-60D3/73
BlueSoft-120D3/73
BlueSoft-180D3/73
BlueSoft-240D3/73
BlueSoft-320D3/73
BlueSoft-400D3/73
BlueSoft-500D3/73
BlueSoft-600D3/135
BlueSoft-800D3/135
BlueSoft-1200D3/135
BlueSoft-1600D3/135

Before using the equipment, read the guide carefully!

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

TABLE OF CONTENTS

- 1. Definition and function
- 2. Technical parameters
- 3. Main parts
- 4. The way it works
- 5. Installation and startup
- 6. Instruction about handling
- 7. Process of measuring the water hardness
- 8. Warranty, guarantee
- 9. Data sheet for setting up
- 10. Warranty document
- 11. Quality Certificate

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

1. DEFINITION AND FUNCTION

The equipment is an automatically operated and regenerated water softening device filled with cation exchanging strongly acid resin regenerated in Na form.

1.1. Water has got its natural circulation. Precipitation with neutral pH absorbs part of the CO2 of the air so it becomes slightly acid. After that, any water that filtrates into the soil and surface water absorb up to a certain extent the elements that create the soil. Among these salts, you can mostly find Calcium, Magnesium and in a lesser amount there is iron, manganese and a lot of other elements. Building up of lime scale is a process while salts dissolved in water get separated so on the inner walls of heat emitter and heating devices there is a deposit of lime scale, which causes congestions, reduced heat emission, lower efficiency and often definitive damages. At increasing temperatures, the process can get even faster, so the following devices have a higher risk of having a limescale deposit: boilers, parts and pipes of central heating and hot water supplying systems, washing machines and dishwashers, steam irons, etc.

THE WATER SOFTENER STOPS THE DEPOSIT OF LIMESCALE

Ion exchanging water softening procedure thrives on the fact that the device changes the calcium and magnesium ions of the salts dissolved in water into natrium ions. Natrium salts do not cause limescale deposits even when there is heat.

2. TECHNICAL PARAMETERS OF THE DEVICE

Min. pressure : 2,5bar
Max. pressure : 6bar
Min. temperature : 4C°
Max. temperature : 25C°

Hardness : under 0,1 nk
Content of salt : invariable
pH value : invariable

Regenerating chemical : high purity NaCl tablet

Quantity : 0,1 - 0,24 kg/

litres of resin per column/reg.

Connection to electricity : 230 V, 50 Hz

The quality of the water to be treated needs to be near drinking water quality.

Max. iron and manganese content : 0.1 mg/l Max. consumption of potassium-permanganate : 10 mg/l Max. content of floating material : 2 mg/l


Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

Volume controlled two columned water softener equipments detailed technical parameters:

Part number	Resin vol./cap. Liter/m3x ^o dH	Control valve/Connection	Brine vol.(liter)	Flow m³/h	Size (mm) HxWxL	Weight kg
BlueSoft 40D3/73	2x10 / 2x40	RX-73A-DVS 1"	70	0.4-1.0	890 x 740 x 640	37
BlueSoft 60D3/73	2x15 / 2x60	RX-73A-DVS 1"	70	0.6-1.2	920 x 580 x 560	49
BlueSoft 120D3/73	2x30 / 2x120	RX-73A-DVS 1"	145	1.1-1.5	920 x 740 x 640	110
BlueSoft 180D3/73	2x45 / 2x180	RX-73A-DVS 1"	145	1.3-2.3	1410 x 840 x 640	150
BlueSoft 240D3/73	2x60 / 2x240	RX-73A-DVS 1"	200	1.8-3.2	1260 x 930 x 870	180
BlueSoft 320D3/73	2x80 / 2x320	RX-73A-DVS 1"	350	2.0-3.6	1420 x 1200 x 1090	230
BlueSoft 400D3/73	2x100 / 2x400	RX-73A-DVS 1"	350	2.5-3.2	1700 x 1240 x 1100	290
BlueSoft 500D3/73	2x125 / 2x500	RX-73A-DVS 1"	350	3.0-3.2	1730 x 1330 x 1160	350
BlueSoft 600D3/135	2x150 / 2x600	RX-135A/DVS 6/4"	500	4.5-8.1	2300 x 2200 x 1400	520
BlueSoft 800D3/135	2x200 / 2x800	RX-135A/DVS 6/4"	750	5.5-9.0	2300 x 2350 x 1500	650
BlueSoft 1200D3/135	2x300 /2x1200	RX-135A/DVS 6/4"	1000	7.0-9.0	2400 x 2550 x 1650	900
BlueSoft 1600D3/135	2x400 /2x1600	RX-135A/DVS 6/4"	1500	10.0-10.8	2500 x 2050 x 1900	1350

The control valve connects and manages both resin tank. At the same time, only one column is providing water, while the other column is in regenerating or waiting state. The pictures only show one type. They can vary in size. *The brine tank can be placed in front of the pressure tank.*

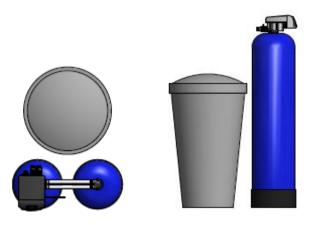

Water purification and treatment equipment manufacturer and wholesale distributor
Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

3. MAIN PARTS

Basically, the device consists of the following main parts.

3.1. Columns to keep resin

They are meant to store the resin charge. The columns are PE pressure tanks developed especially for treating water with polyethylene padding. Outside they have epoxy resin coat rolled by fibre.

Their features are that they last long, have little weight and resist to chemicals and corrosion.

3.2.Resin to exchange ion

Its function is to complete ion exchanging processes on the resin bed. Ion exchanging processes are the base of the chemical operation of the device.

3.3. Blocked valve to regenerate

Its task is to ensure that the mechanical work processes of the device are completed in a programmed, regulated way.

3.4. Brine tank

Its task is to produce the brine solution necessary for the regeneration and to store the regeneration salt.

4. HOW IT WORKS

4.1. CHEMICAL OPERATION

The chemical operation of the device thrives on the fact that the resin that gets filled in is an ion exchanging resin. The resin has this property thanks to the active groups that have free valence and are planted in the neutral polystyrene substrate. The affinity of this compound is relatively small to the natrium and big to the calcium and magnesium. During the operation, the resin that exchanges ion and is loaded with Natrium keeps changing the calcium and magnesium ions of the water into natrium ion. This process itself is meant to be the water softening, and it carries on as long as there is natrium on the active groups of the resin.

Ca(HC0₃)₂+2Na-R=Ca-R₂+2NaHC0₃ Mg(HC0₃)₂+2Na-R=Mg-R₂+2NaHC0₃ CaS0₄+2Na-R=Ca-R₂+Na2S0₄ MgS0₄+2Na-R=Mg-R₂+Na2S0₄ CaCl₂+2Na-R=Ca-R₂+2NaCl MgCl₂+2Na-R=Mg-R₂+2NaCl

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

If the ion exchanging resin gets saturated with calcium and magnesium ions during the operation, the resin is considered discharged.

The discharged resin needs to be regenerated. During regeneration, calcium and magnesium ions get removed from the active groups of the resin and we plant natrium ions to their place. Due to the different affinity, this process can happen only if there is a significant surplusage of natrium. In practice, we get a 10 % NaCl solution to flow through the resin during regeneration. The natrium from the solution gets connected to the active groups of the resin, and the removed calcium and magnesium get connected to the chloride ion and get into the channel together with the regeneratum.

Apart from the calcium and magnesium, there are several other elements in the water. In case the content of iron and manganese is high, the resin to exchange ion can get damaged partly reversibly, partly irreversibly. The harmful deposit on the resin can be removed by etchant, but, for a safe operation, only drinking water quality water is allowed for operating the device. Where the quality of the water is worse, pre-filtering must be completed and iron must be removed.

4.2. MECHANICAL OPERATION

While the device is operating, the mechanical operation of the blocked valve provides the automatical fulfillment of the processes of water production and regeneration.

4.2.1. WATER PRODUCTION

During water production, the water enters the column to keep resin through the upper filter, and it flows through the ion exchanging resin from up to down. The softened water leaves the device through the lower filter.

4.2.2. PRE-WASH

During pre-wash, the way of the water is the same as the water production's way, but the water leaves the device through the drain.

4.2.3. BACKWASH

During backwash, the water enters the column to keep resin through the lower filter and it flows through the ion exchanging resin from down to up while the resin's charge gets stirred up. The water of backwash gets out into the channel through the drain.

4.2.4. BRINE UPTAKE (regeneration)

As it gets through the water jet pump built into the blocked valve (injector), the water uptakes saturated brine from the brine tank and dilutes it up to about of 10 per cent.

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

This solution enters the column to keep resin through the upper filter, and it flows through the resin charge from up to down. While the solution is flowing through, the resin charge gets regenerated. The sewage water of the regeneration leaves through the lower filter at the drain into the channel.

4.2.5. SLOW WASH

The slow wash is a process that has the same direction as the brine uptake. Slow wash starts when the brine tank runs out of salt solution. Then the salt valve fixed into the brine tank closes and stops the sipping effect from sipping air into the column to keep resin. During slow wash, the salt solution gets removed from the resin charge.

4.2.6. QUICK WASH

During quick wash, the water enters the column to keep resin through the lower filter, and it flows through the resin charge from down to up. It leaves through the upper filter at the drain into the channel. During quick wash, the traces of the regenerating chemical get removed and the right water quality gets set up.

4.2.7. DOWNFLOW WASHING

The water enters the column to keep resin through the upper filter and flows through the resin charge from up to down. It leaves through the lower filter at the drain into the channel. During the downflow washing the resin charge that has been stirred up during the quick wash gets recompressed.

4.2.8. FILLING UP THE BRINE TANK

The water enters the column to keep resin through the upper filter. It flows through the resin charge from up to down. It gets into the brine tank through the lower filter then through the pipe which soaks the salt up. Filling back is time controlled. The water for filling up makes a saturated salt solution with the salt tablet in the brine tank and it is used up during the next regeneration.

4.3. DETAILED DESCRIPTION OF THE WAY THE CONTROL WORKS

The automatical blocked valve completes all the operation processes (operation, regeneration) on the basis of the setting up of the clockwork engine. The automatical blocked valve gets the mechanics of the valves to work as well.

The build-up and setting up of the blocked valve are described in the annex.

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

5. INSTALLATION AND STARTUP

5.1. CONDITIONS OF INSTALLATION

A room with flat, horizontal and hard flooring is needed for the installation of the device. The flooring and the direct surroundings of the device must resist to the corrosive effect of the brine. The device must be installed in a room the temperature of which is between +5°C to +40°C. The temperature of the raw water to be treated must not exceed +30 °C. The device must not be installed in a strongly damp or dusty room. It must be protected from frost, radiant heat and ultraviolet radiance.

Near the device, sewage connection and 230 V 50 Hz grounded, electric socket must be provided. In order to diminish risks, we advise to install the device into a room provided with floor drainage.

Below water pressure of 2,5 bars, proper regeneration is not guaranteed, so in this case we advise to build in a device to increase pressure.

In case the water pressure from the water system exceeds 6 bars, a device to decrease pressure has to be fixed in front of the device.

Fluctuation of pressure higher than ±0,5 bar is not allowed! Mechanical protective filter must be built in front of the device. It is important that the mechanical protective filter filters contamination bigger than 100 microns.

The device does not have any extra protection against water or electricity shortage. If needed, it must be provided while installing.


5.2. CONNECTION OF THE EQUIPMENT (it is the responsibility of the customer)

It is the customer's task to have the device connected to the water, sewage and electricity systems. The operator of the device and the specialist to complete the installation should both check if the device has been installed as described in the guide for use and handling and if the conditions to diminish risks of damage are given. The setting up of the device can be completed by the partner of the Euro-Clear Ltd's service that has a partnership contract. Setting up the device only means the setting up of the automatical control valve fulfilling the local conditions.

When setting up, the valid local regulations, general instructions and hygiene regulations must be followed and the technical parameters given above must be respected.

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

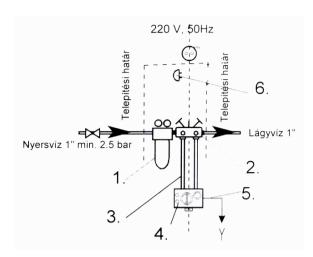

- 1. Pre-filtering equipment
- 2. Montageblock or build by-pass branch
- 3. Flexible tube pair
- 4. Control valve of the water softening equipment
- 5. Drain
- 6. Electrical outlet
- 7. Gravitation drainage on the floor

The pre-filtering device No. 1 and the montageblock No. 2's usage is operational and warranty condition. The montageblock can be replaced by a by-pass branch built from 3 valves. When building in this unit into the pipe, make sure that you connect the raw water onto the filter "1" and the softened water that comes out has to be connected onto the montageblock "2".

The water softener and the montageblock can be connected by the flexible tube pair No. 3. When connecting, pay attention to the flow direction of the water which is marked by the arrows at the montageblock No. 2 and the control valve No 4.

There is a hose outlet on the control valve No. 4, which is the drain of the device. The water that comes out has to be led into the sewage canal. This job can be completed by the plastic hose No. 5. The hose must be pressure resistant as a simple garden hose breaks after a while and the narrow diameter can stop the completion of the regeneration. The sewage water comes out of the device under pressure, but it must be led by free outlet.

An electric plug underlaid of 230 V, 50 Hz must be built within a distance from the equipment that allows the completion of the connection of the prong plug number 6 without the electric cable's getting tight.

During backwash, water comes out from the pre-filtering device No. 1. It is advised to connect the drain connection snag into the drain. In this case the drain water will come out under pressure, too.

On the side of the regenerating tank of the water softening device there is an overflow snag which the superfluous water can get through in case of a breakdown. The liquid has got a hydrostatic pressure, so it can be led only by using floor drainage *or* a siphon drainage fixed at a low level.

An overflowing snag can be found on the water softener equipment's regenerating tank's side, on which in case of malfunction the unnecessary water can leave. The safety overflow snag of the tank can be led to the drain point by a $\frac{1}{2}$ " pressure

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

resistant plastic tube. The water that eventually comes out does not have any pressure, so it must be led to the drain or into the raiser by a slope.

The drain of operation of the water softening device and the overflow of the brine tank can be connected to the drain leading points respecting the following rules.

 Respecting DIN 1988, the tube of the rinsing water and the overflow tube must be fixed at the sewage water connection point, at least at a distance of 20 mm compared to the highest sewage water level, so that the water can get out of the device smoothly.



- The high pressure rinsing water that comes out of the control valve (4) during regeneration must not get to the brine tank through the overflow tube. Make sure that the sewage waterpipe of the water softener and the overflow pipe of the brine are each connected separately into the sewage water.

5.3. SETTING UP OF THE EQUIPMENT

After the jobs mentioned in point 5.2 have been completed, you have to order the setting up of the machine from Euro-Clear Ltd at one of the contact details below:

Mailing address: 9071 Gönyű, Béke u. 2. E-mail address: contact@euro-clear.eu www.euro-clear.eu

After the device has been set up, the copy of the warranty document filled in by the person having completed the setting up has to be sent to the address above in a verifiable way.

The fee of the setting up jobs gets calculated on the basis of the actual price list.

6. INSTRUCTION ABOUT HANDLING

- 1./ Check daily the
- hardness of the incoming water and the
- hardness of the softened water,

they must be noted in the operation diary.

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

2./ Check daily

- the quantity of the regenerating salt in the brine tank, fill it up if necessary, note it in the operation diary.
- 3./ In the brine tank, there must always be an undissolved solid salt tablet enough for one regeneration.
- 4./ Make sure you keep checking the brine consumption as this is the way you can find out if the device regenerates automatically.
- 5./ You need to check daily the pressure of the incoming water on the pressure gauge. In case it decreases by more than 0,5 bars, clean the pre-filter
- 6./ Remove dust from the device with a dry cloth every two weeks.
- 7./ The pre-filtering device must be rinsed back depending on the extent of the contamination but at least once a week. It must be done with the sewage water drain tap that you can find on the bottom of the device. Rinsing back must last for at least 15-20 seconds.
- 8./ Clean the brine tank once a month.
- 9./ Make sure that the device keeps getting 230 V, 50 Hz electricity all the time, for 24 hours and it is under system pressure continuously.

7. Process of measuring the water hardness

The kit that measures water hardness contains a measuring cup and a plastic vial containing some titrating liquid. You can find the same liquid in both of the viols.

- Before testing, the measuring cup needs to be rinsed and then filled up with the water sample to be tested up to the mark of 5 ml. Add a drop of titrating liquid to the water sample in the cup, and then shake the 2 liquids gently.
- If the first drop of titrating liquid makes the water greenish, the tested water is soft water.

If it is not the case, keep repeating the operation until the red colour of the mixture gets greenish. Each drop of the titrating liquid is the equivalent of 1 German hardness, so the hardness of the tested water sample is the same as the number of the drops which are added as long as the sample has got greenish.

- By filling the cup up to the level of 10 ml, you can measure by 0,5 grades if you follow the method mentioned above. In this case, 1 drop of titrating liquid will be the equivalent of 0,5 nk.

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

8. WARRANTY, GUARANTEE

In case of non-perfomance by the producer, the owner of the device can benefit from all warranty rights in 306-309. § in the Civil Code.

The owner of the device can claim for warranty and guarantee only by showing both the receipt that has been received when buying the device and that proves the payment of the complete price and the warranty document that has been filled in.

Warranty and guarantee do not cover faults that have been caused by the following:

- The product has not been used properly, the instructions of the way of handling, using, installing or maintaining etc. have not been respected
- The operation diary has not been kept
- the necessary corrective maintenance has not been completed, or has not been done by the designated professional servicing company,
- the product's nature has been transformed, changed
- the owner of the device has not completed their liability of reducing risks of damage
- Defect, damages and other problems caused by improper transportation and storage of the product.

Warranty and guarantee claims can be validated only in case the operator of the device sends to the producer both pages of the operation data sheet filled in and signed by the professional mechanic in charge of setting up of the device. It must be sent in a provable way.

Please send back to the address below both pages of the data sheet of setting up that have been filled in and signed:

Euro-Clear Ltd.

Mailing address: 9071 Gönyű, Béke u. 2.

E-mail: contact@euro-clear.eu

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

INSTALLATION DATA SHEET

Name of specialist to complete setting up:				
Contact details of the specialist completing the setting up				
Mailing address:				
Telephone number:				
E-mail address:				
Name of the company selling the device:				
Contact details of the company selling the device				
Mailing address:				
Telephone number:				
E-mail address:				
Name of the operator of the device:				
Contact details of the operator of the device				
Mailing address:				
Telephone number:				
E-mail address:				
Type of the set up device:	BlueSoft			
Date of setting up:				
signature, stamp				

Warranty and guarantee are only valid in case the setting up has been completed by Euro-Clear Ltd or its agent. You can order the setting up of the device at the contact details mentioned below.

Euro-Clear Ltd. 9071 Gönyű, Béke u. 2. Tel: +3696/544-240 contact@euro-clear.eu

Water purification and treatment equipment manufacturer and wholesale distributor
Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

Data sheet for setting up

			Iger
1. Chec		echanical and electricity connections as follows:	_
	1.1. 1.2.	Is a mechanical protection filter built in front of the water softener? Is the pressure of the raw water convenient? (2,5 – 6 bar)	
	1.2.	Are the directions of water flow convenient? (2,3 – 6 bar)	
	1.0.	the device)	
	1.4.	Are the outlet of the softening rinsing water and the gravitation overflow of	
		brine tank connected separately onto the channel?	
	1.5.	Is the electricity input right? (230V, 50HZ)	
		you connect the control valve to electrical network, close the incomin	
	•	fter the setting the values and before starting the manual regenerating	g, open
the inc	_	water's tap.	_
	1.6.	Has the hardness of the raw water been measured?	
2 Droar			nk ⁰
z.Flogi	2.1.	control head of the water softening device Have the exact date and time been set?	
	2.2.	Setting the time for regeneration or the quantity	
	2.2 1.		_
		regenerations been set up (in m3)?	
		If yes, then the value is:	day
	2.2.2.	In case the device is volume controlled, has the water quantity been set (i	n m ³⁾
		for between the two regenerations?	
	If yes, i	it has been set up to:	m³
		For example.: in case of a device type BlueSoft 70 and raw water of 20 Ge hardness, it must be set up to: $70 / 20 = 3.5 \text{ m}^3$	rman
	2.3.	Filling back water into the brine tank	
	Start a	manual regeneration with button. Go ahead through the cycles backwash, b	orine draw
	4 - 41-		
		ne water refill cycle. Time for water refill cycle to be set up so there is a conv	enient
	quantit	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter)	
	quantit	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter)	enient
	quantity Is the a	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate?	
	quantity Is the a	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings)	3
	quantity Is the a 2.4. 2.4.1.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash)	
	quantity Is the a 2.4. 2.4.1. 2.4.2.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up?	
	quantity Is the a 2.4. 2.4.1.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash)	
	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse)	
	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode): time (Timer)	
	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode): time (Timer) immediate volume controlled regeneration (Meter immediately)	
	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode): time (Timer) immediate volume controlled regeneration (Meter immediately) volume controlled delayed regeneration (Meter delayed)	
3 Sta	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	
3 Sta	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	
3 Sta	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	
3 Sta	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
3 Sta	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
3 Sta	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.5. arting ma 3.1. 3.2. 3.3. 3.4.	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
4. After	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3. 3.4. finishin	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
4. After Withou	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3. 3.4. finishin ut back	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
4. After Withou 5 Set th 5/2023	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3. 3.4. finishin ut back ne water (The d	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
4. After Withou 5 Set th 5/2023 the more	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3. 3.4. finishin ut back ne water (The d ntage bl	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine).
4. After Withou 5 Set th 5/2023 the mor Water h	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3. 3.4. finishin ut back ne water (The d ntage bl nardness	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine). ce. nment rdness: On
4. After Withou 5 Set th 5/2023 the mor Water h 6. Filling	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3. 3.4. finishin ut back he water (The dentage blandrdness g up the	Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine). ce. nment rdness: On / daily salt.)
4. After Without 5 Set th 5/2023 the more Water 16. Filling 7. Train	quantity Is the a 2.4. 2.4.1. 2.4.2. 2.4.3. 2.4.4. 2.4.5. rting ma 3.1. 3.2. 3.3. 3.4. finishin ut back ne water (The dentage ble) nardness g up the the staf	y of water in the cabinet. Quantity of refilled water= resin literX0,8 (liter) amount of water refilled adequate? Setting up time for washing (advanced settings) Has the time for backwash been set up? (Backwash) Has the time for brine draw (Brine Draw) been set up? Has the time for rinsing been set up? (Rinse) Is the time for water refill convenient? (Refill) Choice of regeneration mode (Regeneration Mode):	ut of brine). ce. nment rdness: On

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

WARRANTY	' DOCUMENT
----------	------------

In case the device is properly used, the producer undertakes a warranty of **12 months** starting from the setting up, but maximum **18 months** starting from the date of issuing the quality certificate.

DATE OF SETTING UP:				
signature, stamp				

The warranty and guarantee are only valid in case the setting up has been completed by Euro-Clear Ltd. or its agent. You can order the setting up of the device at the details mentioned below.

Please send us back the warranty document, setting up data sheet completely filled. In other case the warranty is not valid.

Please keep the warranty document, setting up data sheet and quality certificate for administration purposes in the future.

In case of a breakdown or fault, please inform us in written at the e-mail address contact@euro-clear.eu about the problem that has occured.

Water purification and treatment equipment manufacturer and wholesale distributor

Tel: +36 96 544-240 • E-mail: contact@euro-clear.eu • Web: www.euro-clear.eu

QUALITY CERTIFICATE

1. Issuer of the quality certificate:		2. Producer:		
Euro-Clear Ltd.		Euro-Clear Ltd.		
3. Punctual name of product (its function):				
And an extra control of the control	, 	N 0 - ft		
Automatic water softening device 4. Quantity	5. Weight and	SiueSoπ	6. Date of production:	
4. Quantity	5. Weight and	(OI) SIZE.	6. Date of production.	
1				
7. Can be used		8. Identifying p		
		a./ Control valv		
		b./ ITJ-number:		
		c./ Part number: d./ Other identifying details:		
9. Delivery and storage regular	tions:	10. Wrapping:	nymg dotano.	
Transportation and storage must		Cardboard.		
standing position. Store in a dry,	cool place,			
away from water and precipitation				
expose to direct sunlight or UV r	adiation.			
Extremely frost-hazardous.	raduat (with pu	notual toobnical	data, results of measurement):	
in important leatures of the p	roduct (with pu	nctuai tecimicai	data, results of measurement).	
Flow of volume:	m³/h			
Quantity of resin :	litres			
Quality and classifying: Conve	enient!			
14. Other details:		12. Method of inspection for checking the quality		
Serial number:			: During production	
			for use and handling:	
			ed in the guide for use and handling of the person issuing the quality	
		certificate:	or the person issuing the quality	
		Date:		
		Gönyű, 20		
			signaturo stama	
			signature, stamp	